TORNADO INDUSTRIES 7401 W. LAWRENCE AVENUE CHICAGO, IL 60706 (708) 867-5100 FAX (708) 867-6968 www.tornadovac.com



# **Operation & Maintenance Manual**

For Commercial Use Only



**Clean-Air Battery Glazer 2500B** 

# CATALOG NO.

98498 For parts list, see L2528QHP

Effective 9/12/2005

L2528QH Revised 9/05 ©2005 Tornado Industries All rights reserved..

## <u>NOTES</u>

## Write your machine serial number here:

### This instruction book covers:

CATALOG NO.	98498
MODEL	2500
SERIES	Н
VOLTS	36

ALL SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE.

### **TABLE OF CONTENTS:**

Warranty Information4
Pad Installation Instructions5

## Long-term buyer protection warranties

Tornado® Standard Warranty Program*		
Warranties do not cover components subject to normal wear or abuse and misuse, and have other limitations not specified here. For full details, contact your Authorized Tornado Distributor, Service Center, or the Tornado Technical Service Department. Tornado sales and service	<b>10 Years:</b> All plastic tanks and rotationally-molded bodies <sup>1) 2)</sup>	
	<b>2 Year:</b> Parts on all Tornado and Tornado/Karcher cleaning equipment <sup>1) 2) 3)</sup>	
representatives are not authorized to waive or alter the terms of this warranty, or to increase the obligations of Tornado under the warranty.	<b>1 Year:</b> Labor on all Tornado and Tornado/Karcher cleaning equipment <sup>2)</sup>	
	<b>1 Year:</b> Warranty on batteries and chargers, one year pro-rated. ** 6 Month Warranty on Gel Batteries All battery warranties are handled by the battery manufacturer, please call customer service for more information.	

Thank you for choosing Tornado products. We are proud to offer the most complete line of commercial and industrial cleaning equipment in the industry. Our reputation for quality, innovation and durability is unsurpassed.

\* Effective January 1st, 2005. Terms subject to change without notice.

- 1) Windshear<sup>™</sup> Blower-Dryer, Insulation Blowers, T191, T201, T12/1, CV 30, CV 38, CW 50, CW 100, Pro PAC Vacs, Duo-Upright Carpetkeepers<sup>™</sup>, Gas & Electric Pressure Washers, and all chargers are warranted for 1 (one) year for both parts and labor.
- 2) Warranties on all riding sweepers including the ICC1, KM 100/100 R, KMR 1250, and KMR 1700 are 24 months parts/6 months labor OR 1000 hours of operation, whichever comes first. Warranties on the 75/140 & 90/140 are 24 months parts/12 months' labor OR 1,000 hours of operation whichever comes first.
- 3) All non-wear item parts purchased after warranty expiration are warranted for 90 days.
- 4) Warranty starts from the date of sale to the consumer or, at Tornado's discretion, 6 months after dealer purchased the unit from Tornado, whichever comes first.

Note: Tornado, The Latest Dirt, Floorkeeper, Carpetkeeper, Carpetrinser, Carpetrinser/Dryer, Headmaster, Taskforce, PAC-VAC, T-Lite, Glazer, Windshear, Max-Vac, CV 30, CV 38, and Trot-Mop are trademarks of Tornado Industries.

1-800-VACUUMS Chicago area: (708) 867-5100 Fax: (708) 867-6968 7401 W. Lawrence Avenue Chicago, IL 60706

#### 98498 CLEAN-AIR BATTERY GLAZER


### PAD INSTALLATION INSTRUCTIONS

#### CAUTION: Be sure power switch is turned off before performing any maintenance operations.

#### Pad installation procedure

- 1. Pull the machine back approximately 3' so that the rear casters pivot around to the reverse of their normal forward position.
- 2. Ensure that the foot pedal is UP instead of locked in the down position. The pad should be resting on the floor. Push firmly down on the handle to tip the unit back until it rests on both rear side "blocks". If the foot pedal is locked in the down position, the unit cannot stay tipped back.
- 3. Under the front pad shroud, locate the pad retainer plate. Grasp the pad holder to prevent turning, and twist the pad retainer counter-clock-wise to remove. Center the pad on the holder and press in place.
- 4. Replace pad retainer and hand tighten. Do not over tighten.

#### CAUTION: Do not store unit tilted on its back. Charge in operating position only.

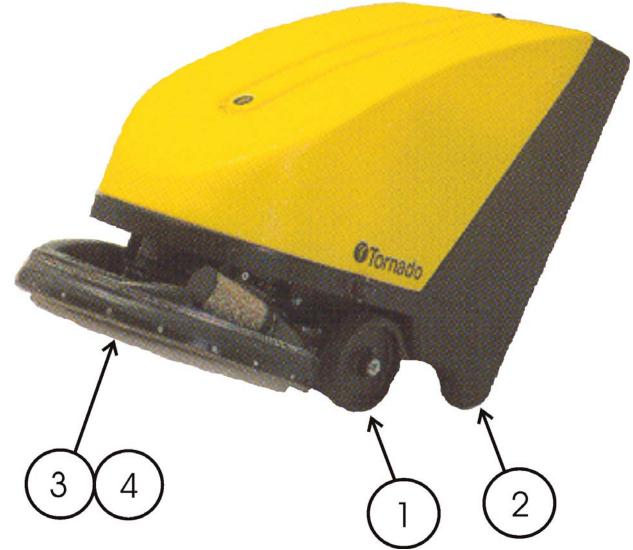

Rear casters located under machine, not shown.