


KÄRCHER

Operating Instructions (ENG)

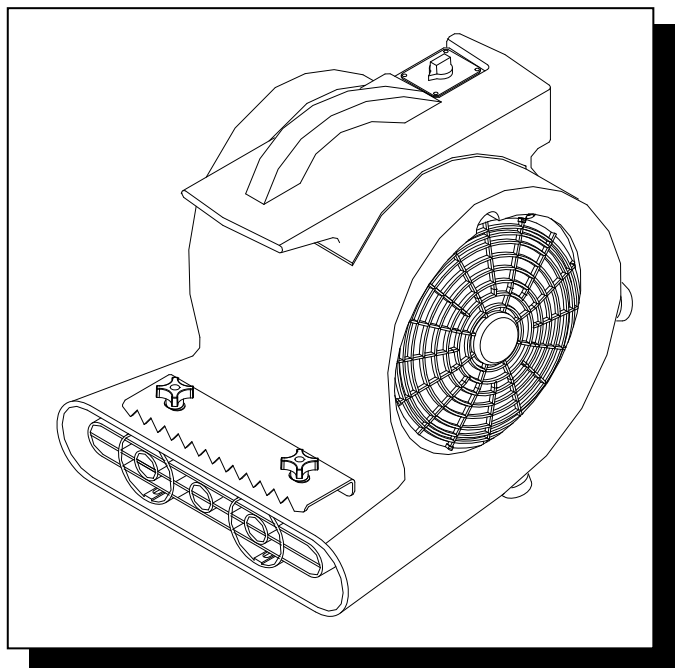

MODELS:

1.004-052.0
AB84 EU

1.004-064.0
AB84 CLASSIC

1.004-053.0
AB84 CUL

1.004-065.0
AB84 CLASSIC EU

1.004-054.0
AB84 JP

1.004-055.0
AB84 GB

1.004-056.0
AB84 CN



Read instructions before operating the machine.

G

86371920
10/31/19

MACHINE DATA LOG/OVERVIEW

MODEL _____

DATE OF PURCHASE _____

SERIAL NUMBER _____

SALES REPRESENTATIVE # _____

DEALER NAME _____

OPERATIONS GUIDE NUMBER _____

PUBLISHED _____

YOUR DEALER

Name: _____

Address: _____

Phone Number: _____

HOW TO USE THIS MANUAL

This manual contains the following sections:

- HOW TO USE THIS MANUAL
- SAFETY
- OPERATIONS
- MAINTENANCE
- PARTS LIST

The HOW TO USE THIS MANUAL section will tell you how to find important information for ordering correct repair parts.

Parts may be ordered from authorized dealers. When placing an order for parts, the machine model and machine serial number are important. Refer to the MACHINE DATA box which is filled out during the installation of your machine. The MACHINE DATA box is located on the inside of the front cover of this manual.

MODEL _____
DATE OF PURCHASE _____
SERIAL NUMBER _____
SALES REPRESENTATIVE # _____
DEALER NAME _____
OPERATIONS GUIDE NUMBER _____
PUBLISHED _____

The model and serial number of your machine is on the back of the machine.

The SAFETY section contains important information regarding hazard or unsafe practices of the machine. Levels of hazards is identified that could result in product or personal injury, or severe injury resulting in death.

The OPERATIONS section is to familiarize the operator with the operation and function of the machine.

The MAINTENANCE section contains preventive maintenance to keep the machine and its components in good working condition. They are listed in this general order:

- Power cord/switch

The PARTS LIST section contains assembled parts illustrations and corresponding parts list. The parts lists include a number of columns of information:

- **REF** – column refers to the reference number on the parts illustration.
- **PART NO.** – column lists the part number for the part.
- **PRV NO.** – reference number.
- **QTY** – column lists the quantity of the part used in that area of the machine.
- **DESCRIPTION** – column is a brief description of the part.
- **SERIAL NO. FROM** – column indicates the first machine the part number is applicable to. When the machine design has changed, this column will indicate serial number of applicable machine. The main illustration shows the most current design of the machine. The boxed illustrations show older designs.
- **NOTES** – column for information not noted by the other columns.

NOTE: If a service or option kit is installed on your machine, be sure to keep the KIT INSTRUCTIONS which came with the kit. It contains replacement parts numbers needed for ordering future parts.

NOTE: The number on the lower left corner of the front cover is the part number for this manual.

TABLE OF CONTENTS

Machine Data Log/Overview.....2

HOW TO USE THIS MANUAL

How to use this Manual.3
Table of Contents4

SAFETY

Important Safety Instructions5
Hazard Intensity Level.6
Grounding Instructions.....7

OPERATION

Set Up.....8
On/Off Procedure.....8

MAINTENANCE

Power Cord.....8
Dust in Motor Windings.....8
Lubricating Motor Sleeve Bearings.....8
Fan Removal.8
Power Cord/Capacitor..8
Motor Removal.8
Wiring Diagram...9

GROUP PARTS LIST

Body Assembly..... 10
Handle & Wheels..... 12

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precaution must always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS MACHINE.



WARNING: To reduce the risk of fire, electric shock, or injury:

Use only indoors. Do not use outdoors or expose to rain.

Use only as described in this manual. Use only manufacturer's recommended components and attachments.

If the machine is **not working properly**, has been dropped, damaged, left outdoors, or dropped into water, return it to an authorized service center.

Do not operate the machine with any openings blocked. Keep openings free of debris that may reduce airflow.

Do not operate this machine near flammable fluids, dust or vapors.

Maintenance and repairs **must be done** by qualified personnel.

During operation, attention shall be paid to other persons, especially children.

When leaving unattended, secure against unintentional movement.

The machine shall only be operated by instructed and authorized persons.

When leaving unattended, switch off or lock the main power switch to prevent unauthorized use.

Do not handle the plug or machine with wet hands.

Do not unplug machine by pulling on cord. To unplug, grasp the plug, not the cord.

Do not use with damaged cord or plug. Follow all instructions in this manual concerning grounding the machine.

Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners.

Do not pull/run machine over cord. **Keep** cord away from heated surfaces.

Connect to a **properly** grounded outlet. See Grounding Instructions.

Use only on GFCI protected receptacles.

Do not use this fan with any solid-state speed control device.

SAVE THESE INSTRUCTIONS

HAZARD INTENSITY LEVEL

The following symbols are used throughout this guide as indicated in their descriptions:

HAZARD INTENSITY LEVEL

There are three levels of hazard intensity identified by signal words -**WARNING** and **CAUTION** and **FOR SAFETY**. The level of hazard intensity is determined by the following definitions:

WARNING:

WARNING - Hazards or unsafe practices which COULD result in severe personal injury or death.

CAUTION:

CAUTION - Hazards or unsafe practices which could result in minor personal injury or product or property damage.

FOR SAFETY: To identify actions which must be followed for safe operation of equipment.

Report machine damage or faulty operation immediately. Do not use the machine if it is not in proper operating condition. Following is information that signals some potentially dangerous conditions to the operator or the equipment. Read this information carefully. Know when these conditions can exist. Locate all safety devices on the machine. Please take the necessary steps to train the machine operating personnel.

FOR SAFETY:

DO NOT OPERATE MACHINE:

Unless Trained and Authorized.

Unless Operation Guide is Read and understood.

In Flammable or Explosive areas.

In areas with possible falling objects.

WHEN SERVICING MACHINE:

Avoid moving parts. Do not wear loose clothing; jackets, shirts, or sleeves when working on the machine. Use Kärcher approved replacement parts.

THIS PRODUCT IS FOR COMMERCIAL USE ONLY.

ELECTRICAL:

The amp, hertz, and voltage are listed on the data label found on each machine. Using voltages above or below those indicated on the data label will cause serious damage to the motors.

EXTENSION CORDS:

If an extension cord is used, the wire size must be at least one size larger than the power cord on the machine, and must be limited to 50 feet (15.5m) in length.

GROUNDING INSTRUCTIONS:

This appliance must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

WARNING:

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the appliance - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

OPERATION & MAINTENANCE

OPERATION

1. Open the doors or windows if possible to aid in ventilation.
2. Ensure that the unit is turned off, plug the power cord into the outlet.
3. Turn the switch to the desired speed.
4. Turn the unit off before un-plugging the power cord from the outlet.

MAINTENANCE

1. Frequently inspect power cord for frayed or damaged insulation.

WARNING:

Remove machine power cord from electrical source before making any repairs or adjustments to machine.

POWER CORD/SWITCH


Power cord and switch can be serviced.

1. Remove the 4 screws holding switch down.
2. To replace switch unplug wires and replace switch. See wiring diagram.
3. To replace power cord see step 1.
4. Unplug wires, loosen strain relief and remove cord.
5. Replace power cord. See wiring diagram.


CAUTION: When reinstalling motor and fan, make sure the wires are positioned and secured so they will not touch fan during rotation.

CAUTION: When reinstalling electrical parts, refer to wiring diagram for correct connections

WIRING DIAGRAM

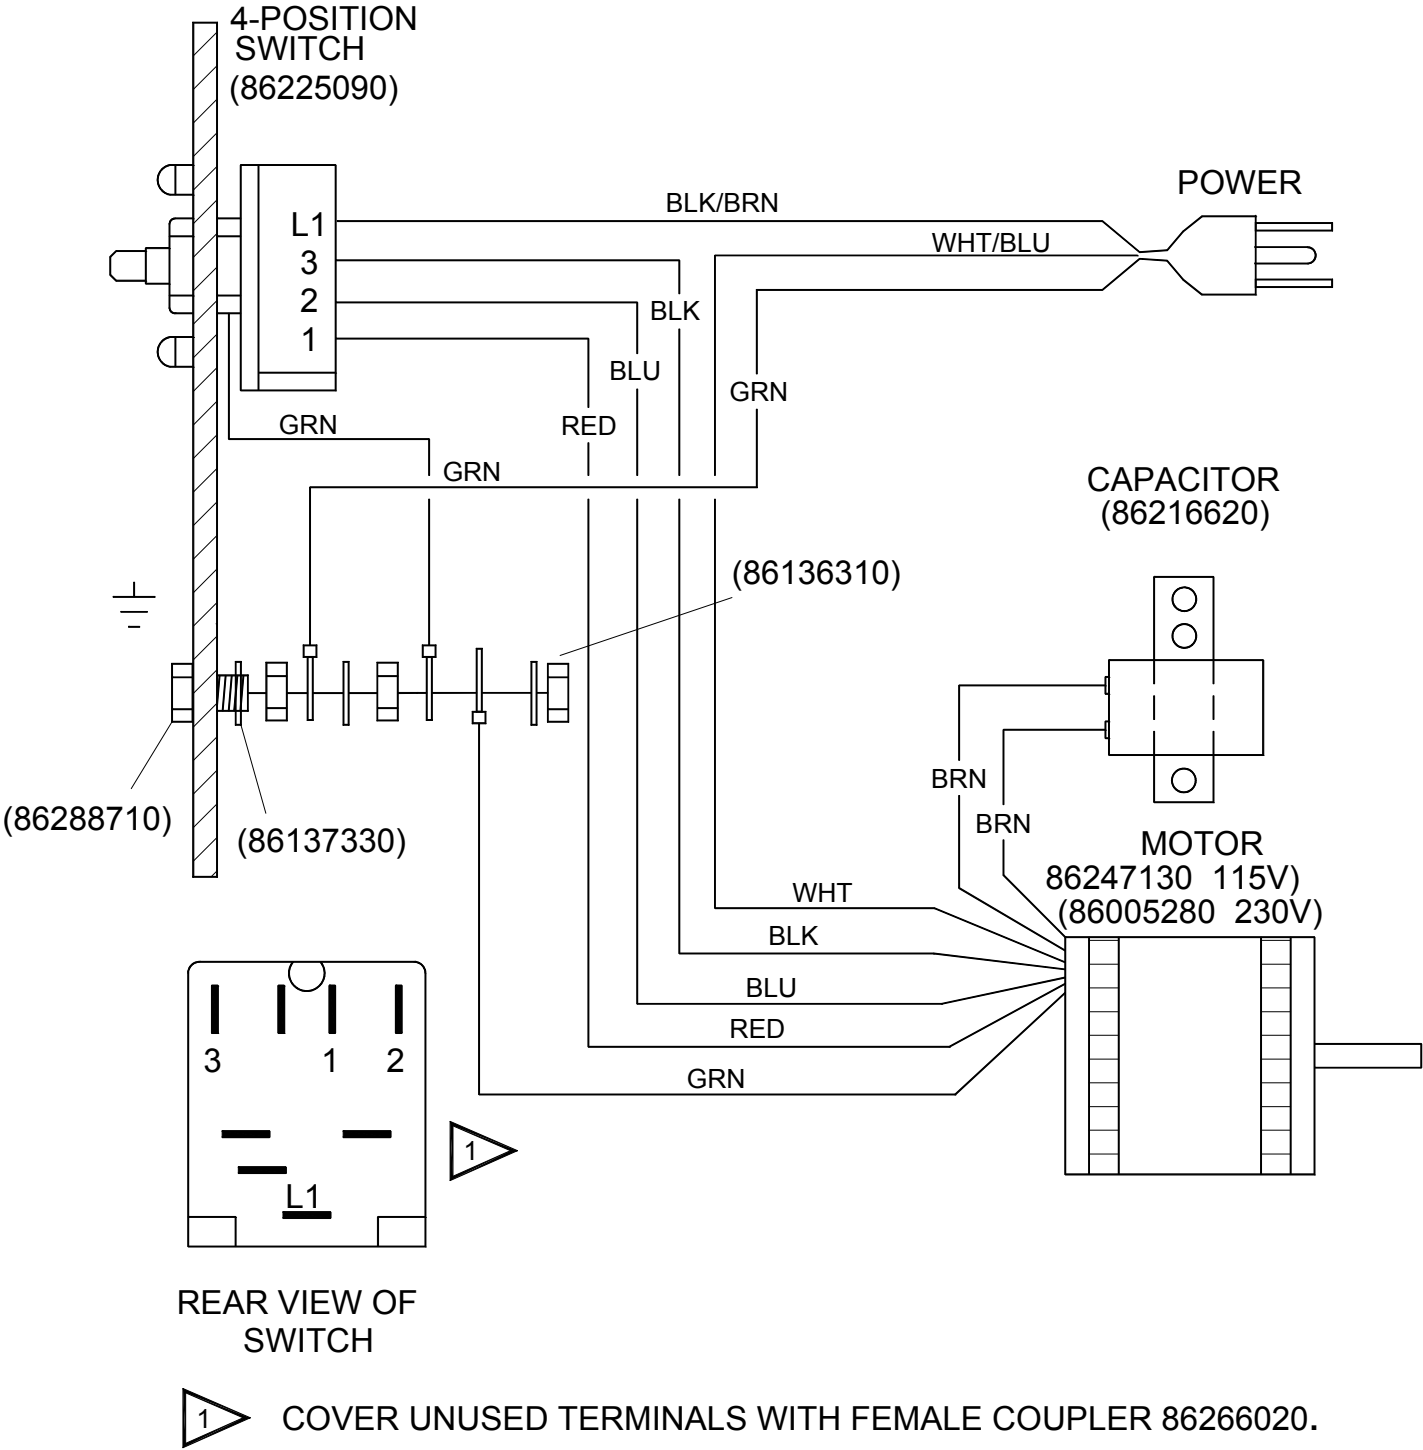


AIR BLOWER

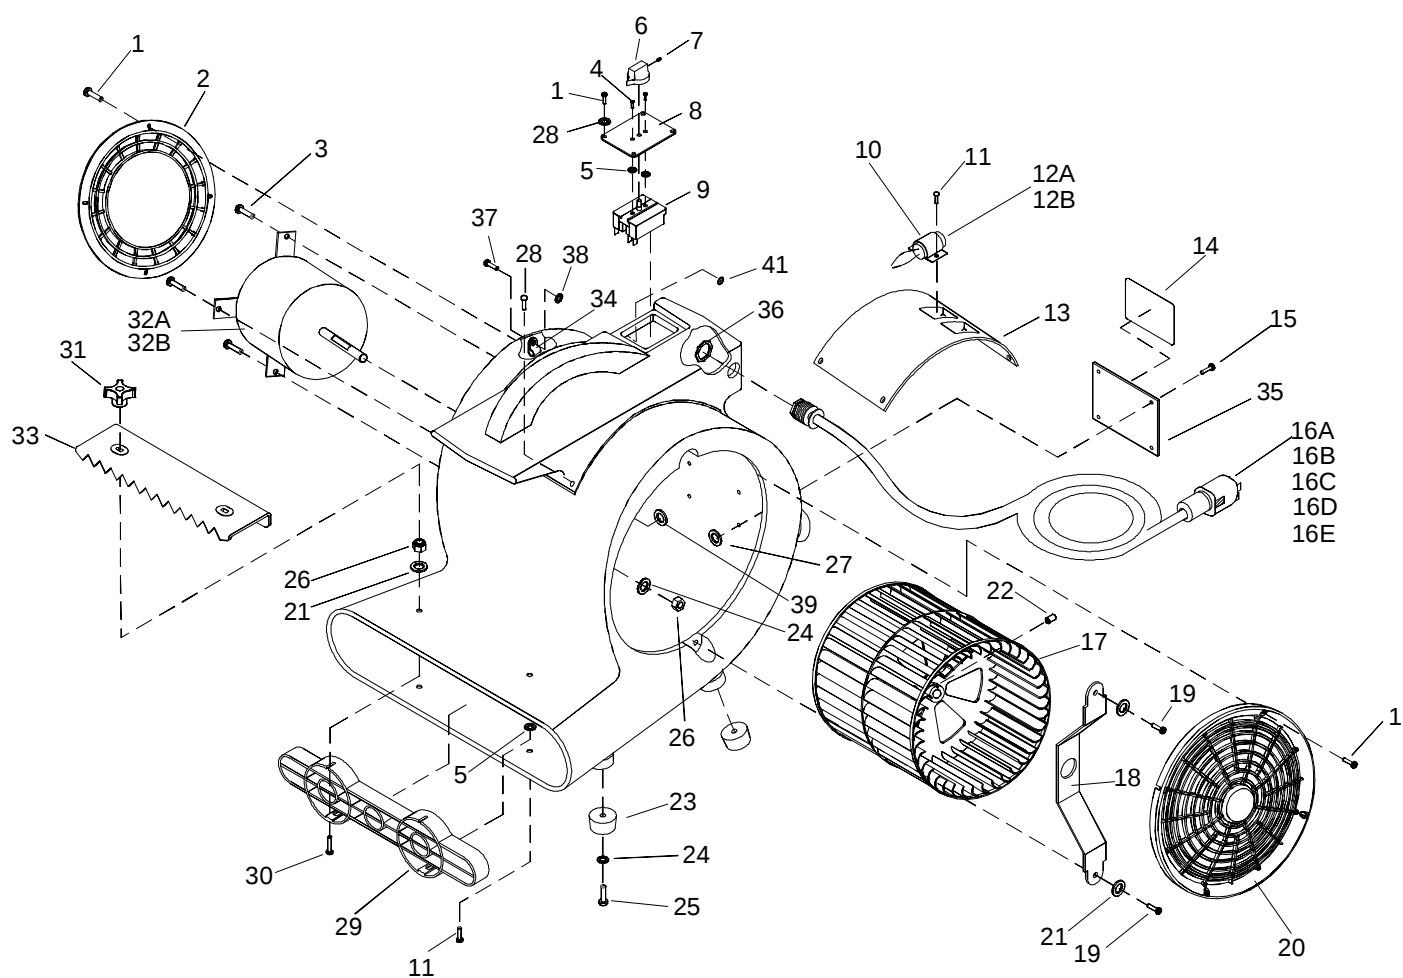

AIR BLOWER PARTS LIST

REF	PART NO.	PRV NO.	QTY	DESCRIPTION	SERIAL NO. FROM	NOTES:
1	86136750	70765	8	SCREW, M4-.7 X 15 PNHSM		
2	86214700	36210	1	9" BLOWER GRILL		
3	86136770	70768	2	SCREW, M6-1 X 16 FLHMS BLKOX		
4	86136630	70246	2	SCREW, 8-32 X .25 PHPNHMS BLK		
5	86137390	87255	5	WASHER M4 RIVET BACKUP		
6	86371710	-	1	KNOB, SWITCH, YLW		
7	86136840	70771	1	SET SCR, M3-.5 X 8MM		
8	86371730	-	1	PLATE, SWITCH AB, YLW		
9	86225090	72176	1	SWITCH AB		
10	86288700	140474	1	CLAMP, CAPACITION AB		
11	86136540	67481	4	RIVET, M4 X 14MM		
12A	86216620	27943	1	CAPACITOR, AB		120VAC ONLY
12B	86375610	-	1	CAPACITOR, RUN, 15uF, 450VAC		230VAC ONLY
13	86223050	62936	1	PLATE, INNER AB		
14	86245090	50344	1	LABEL, WARNING		
15	86136550	67483	4	RIVET, M3 X 12MM		
16A	86217020	-	1	CORD ASSEMBLY, 14X3 SJTX25'AB		US & CANADA
16B	86217030	-	1	CORD ASSEMBLY, AUST AB		AUSTRALIA, NEW ZEALAND & CHINA
16C	86288850	-	1	CORD ASM, AB EURO		EUROPE
16D	86364850	-	1	CORD ASM, 230V GB, 25FT		GREAT BRITAIN
16E	86371290	-	1	CORD ASM, PSE, AB		JAPAN
17	86217840	34389	1	FAN, SQUIRREL CAGE AB		
18	86215760	140467	1	BRKT, MOTOR SHAFT AB		
19	86136740	70764	2	SCREW, M6-1 X 15 PNHMS BLKOX		
20	86214690	36211	1	10" BLOWER GRILL		
21	86137340	87211	4	WASHER, M6 FLT BLK		
22	86136830	70770	1	SET SCR, M8 X 8MM CUP PT.		
23	86217910	66352	4	FOOT, BLOWER		
24	86225730	87218	8	WASHER, M6 X 20.5 X 1.6 ZNPLT		
25	86136760	70767	4	SCREW, M6-1 X 20 HEXBTNHCS ISO7380 SS		
26	86271550	57220	6	NUT, M6-1 HEX NYLOCK STL ZNPLT		
27	86225850	87517	4	WASHER, M3, FL, ISO 7089, SST		
28	86225750	87239	4	WASHER M4 INT STAR BLKZNC PLT		
29	86218420	36212	1	GUARD, FRONT AB		
30	86136730	70763	2	SCREW, M6-1 X 40 PNHMS BLKOX		
31	86371720	-	2	KNOB, CARPET CLAMP, YLW		
32A	86005280	53556	1	MOTOR 230V 3SPD 1/2HP		
32B	86247130	53149	1	MOTOR, 115V 3SPD 1/2HP		
33	86216760	20100	1	CLAMP, CARPET AB		
34	86198450	20005	1	CLAMP, 5/16 DIA NYLON		
35	86079800	62214	1	PLATE, WARNING LABEL		
36	86137370	87231	1	WASHER, M18 STAR		
37	86136560	87484	1	RIVET, M5 X 20		
38	86288680	87230	1	WASHER, M5 RIVET BACKUP		
39	86137360	87225	4	WASHER, M4 RIVET BACKUP		
40	86372180	-	4	SCREW, M4-.7 X 10 PNHSMs, BLK		
41	86245040	50279	1	LABEL, GROUND SYMBOL		

AIR BLOWER HANDLE

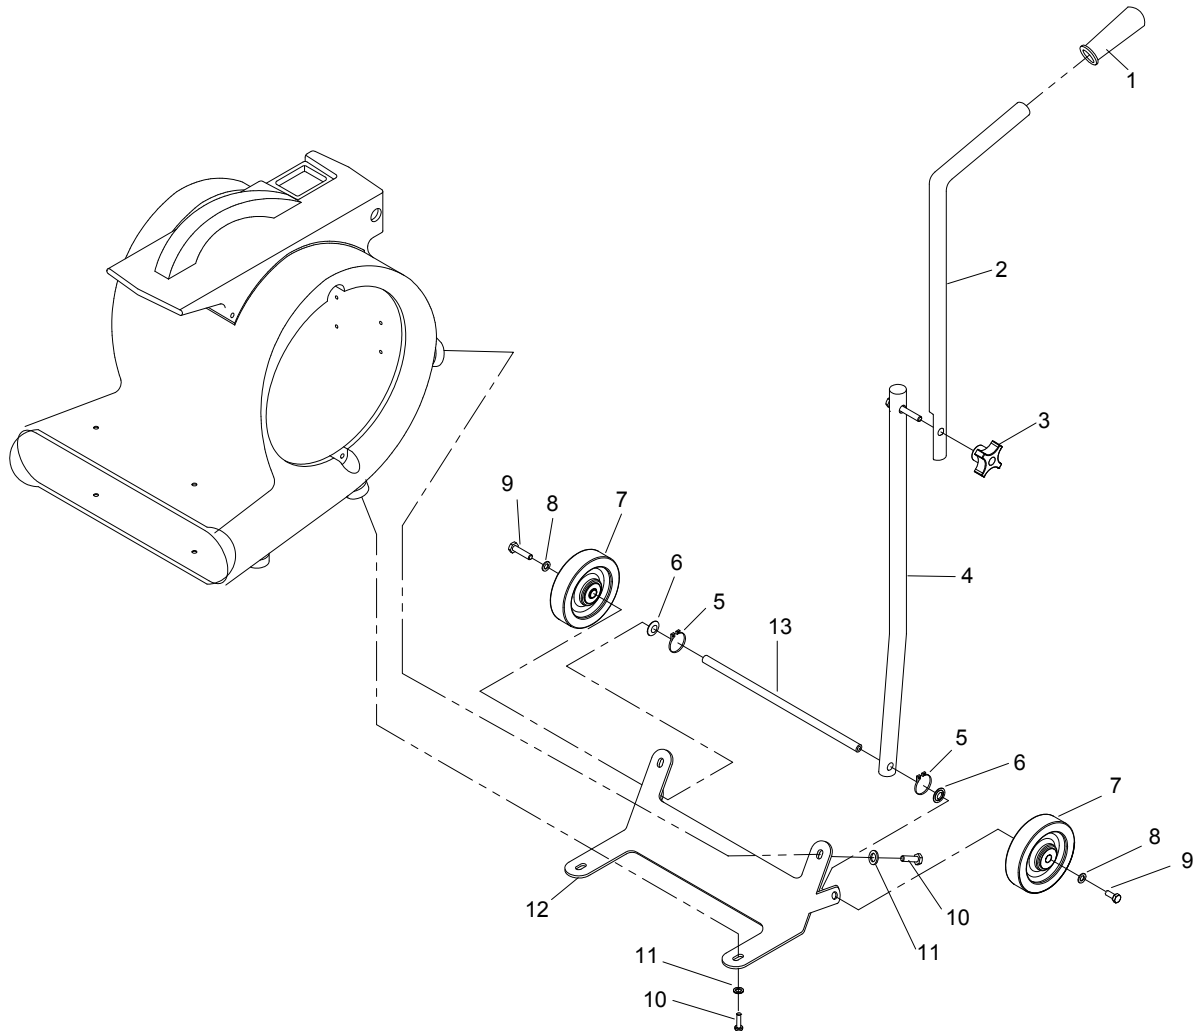

AIR BLOWER HANDLE

REF	PART NO.	PRV NO.	QTY	DESCRIPTION	SERIAL NO.	NOTES:
1	86004070	36196	1	GRIP, POLISHER HANDLE		
2	86292520	-	1	TUBE, HANDLE UPR, LONG		
3	86371700	-	1	KNOB, HANDLE LOCK, YLW		
4	86225400	78485	1	TUBE, HANDLE LOWER		
5	86223500	67469	2	RING, 13MM EXTERNAL SNAP		
6	86222270	57276	2	NUT, .51 PUSH SPRST		
7	86226020	89206	2	WHEEL 5D X 1.25 X 13MMID GRY		
8	86137280	87054	2	WASHER, M8 FLAT DIN125A PLT		
9	86136640	70262	2	SCR, M8-1.25 X 20 HHMS PLT		
10	86136760	70767	2	SCREW, M6-1 X 20 HEXBTNHCS ISO7380 SS		
11	86137380	87233	2	WASHER, 20MM OD		
12	86215490	140495	1	BRACKET, WHEEL AB		
13	86214960	03118	1	AXLE, BLOWER WHEEL		