


# PTAC CLEANING CRADLE

## PROFESSIONAL PTAC CLEANING EQUIPMENT OWNER'S/OPERATOR'S MANUAL

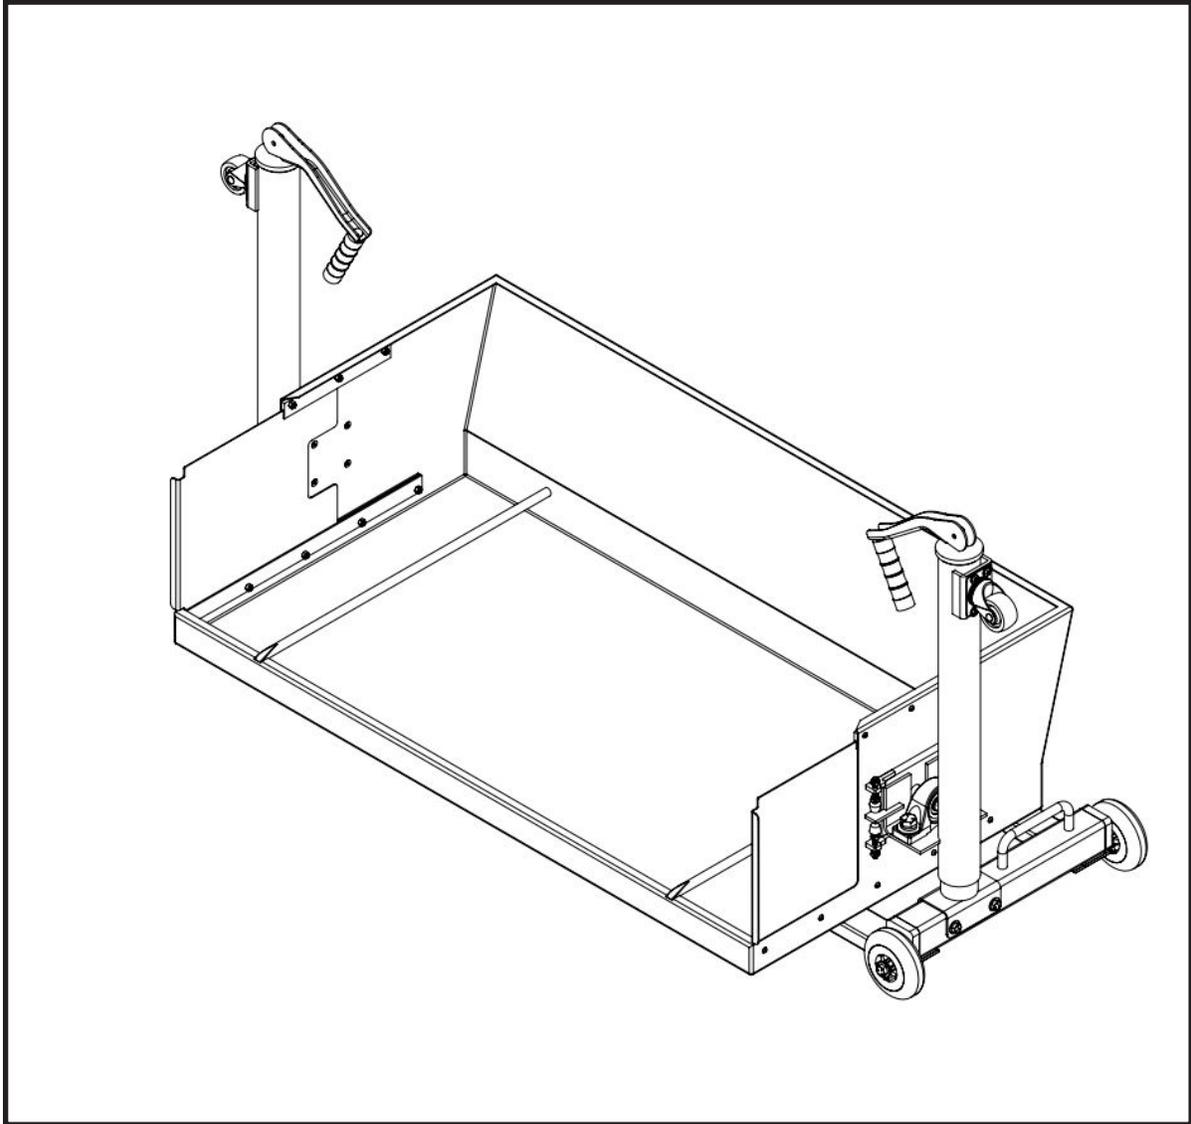

PROUDLY MANUFACTURED BY

**EDIC**



[WWW.EDIC-USA.COM](http://WWW.EDIC-USA.COM)

Revised 9-28-21

## RECEIVING YOUR NEW PTAC CLEANING

**CRADLE:** When your package is delivered, check the carton carefully for signs of rough handling. If your CRADLE is damaged, notify the carrier immediately and request an inspection. Be sure to keep the carton, packing inserts, packing lists and carrier's receipt until the inspector has verified your claim.

EDIC's liability ceases when the carrier picks up the shipment. However, our customer service staff will be happy to furnish any information needed in connection with the claim and will attempt to expedite a resolution.



## PLEASE READ BEFORE OPERATING YOUR NEW CRADLE:

Read the manual carefully and completely before attempting to operate the unit. This manual has important information for the use and safe operation of the machine. Keep this manual handy at all times.

This equipment has been engineered and manufactured to provide excellent performance and service. To ensure that your equipment will continue to perform as intended:

- Maintain equipment regularly- following the suggested maintenance schedule provided.
- Use only original EDIC parts when servicing.
- Operate equipment with care.

If additional information is needed, please contact:



**EDIC**  
**800-338-3342**

All information and specifications printed in the manual are current at the time of printing; however because of EDIC's policy of continual product development, we reserve the right to make changes at any time without notice.

## FAILURE TO COMPLY WITH THE FOLLOWING WARNINGS AND INSTRUCTIONS WILL VOID THE WARRANTY AND CAN CAUSE POTENTIALLY HAZARDOUS CONDITIONS.



### WARNING!

- PTAC units must be unplugged before being placed into the CRADLE
- The machine was designed for cleaning PTAC units as per instructions and recommendations written in this manual. Any deviation from its proper use or purpose and the consequential damage that may occur is the sole responsibility of the end user.
- Always read and understand your chemical's MSDS (Material Safety Data Sheet) before use.
- the CRADLE and the PTAC unit are heavy. Use proper lifting techniques to accommodate equipment. ask for assistance if something is too heavy.
- Pay attention to your fingers and body parts when sliding the PTAC into the cradle and back into the wall sleeve.
- This equipment is not designed to handle or use combustible/volatile substances such as gasoline or kerosene, in, on, or near the machine. The use of such materials will cause extreme hazardous condition.
- This is not a toy. Do not allow children or pets in, on, or near this equipment.
- Use appropriate PPE including eye protection, a breathing mask is suggested.

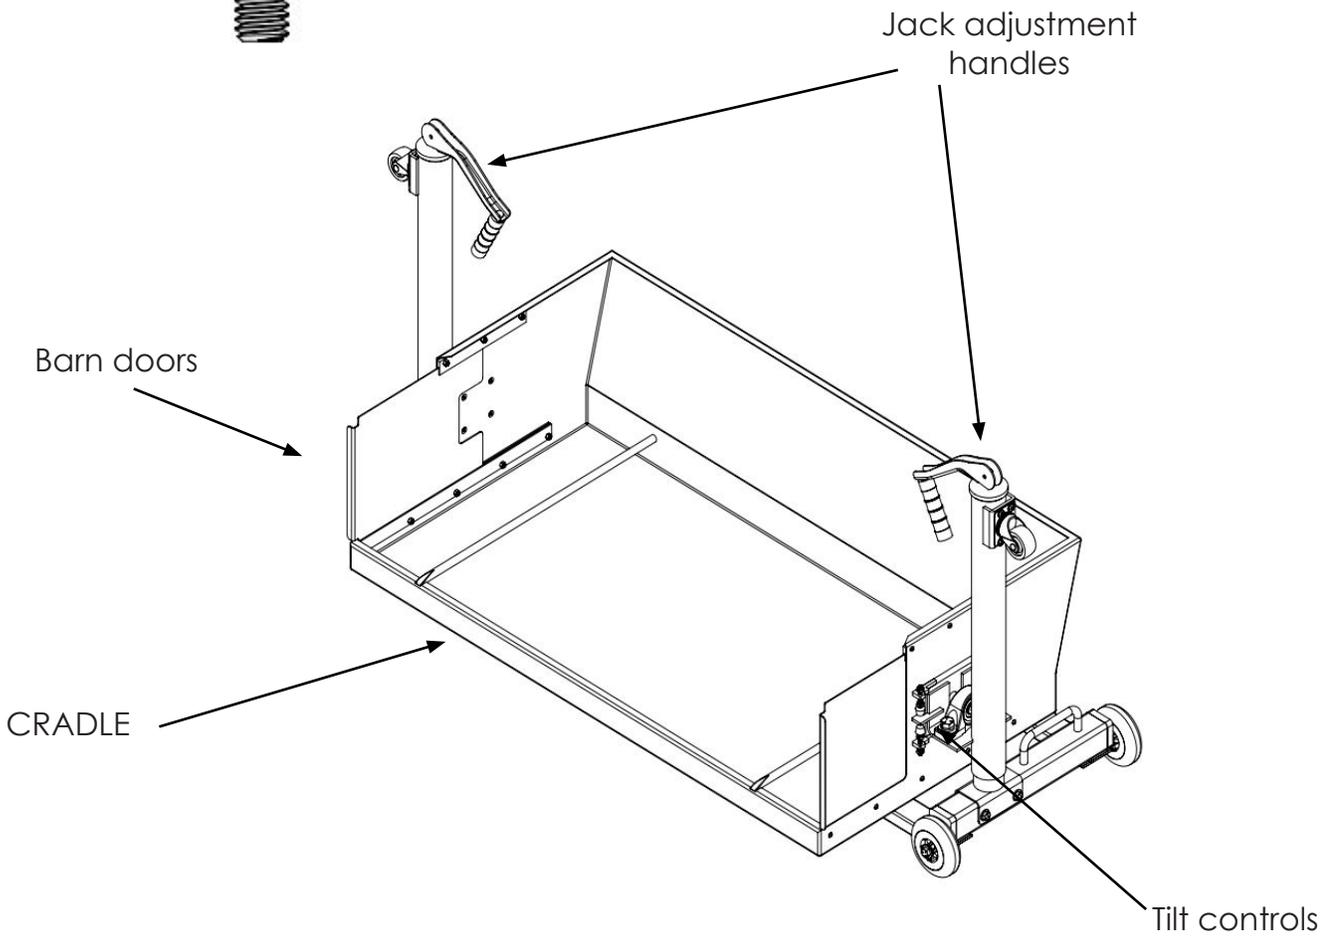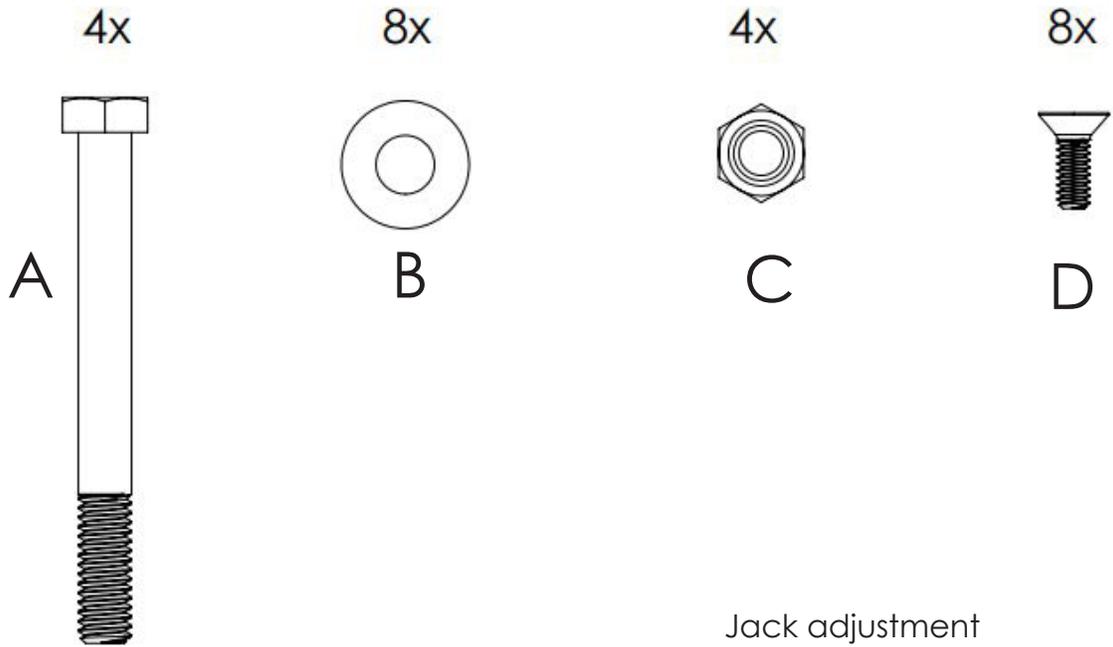



## STEP 1.

Gather Hardware A, B, and C and attach the jack uprights to the base. Make sure that the mounting brackets on the jacks face each other.

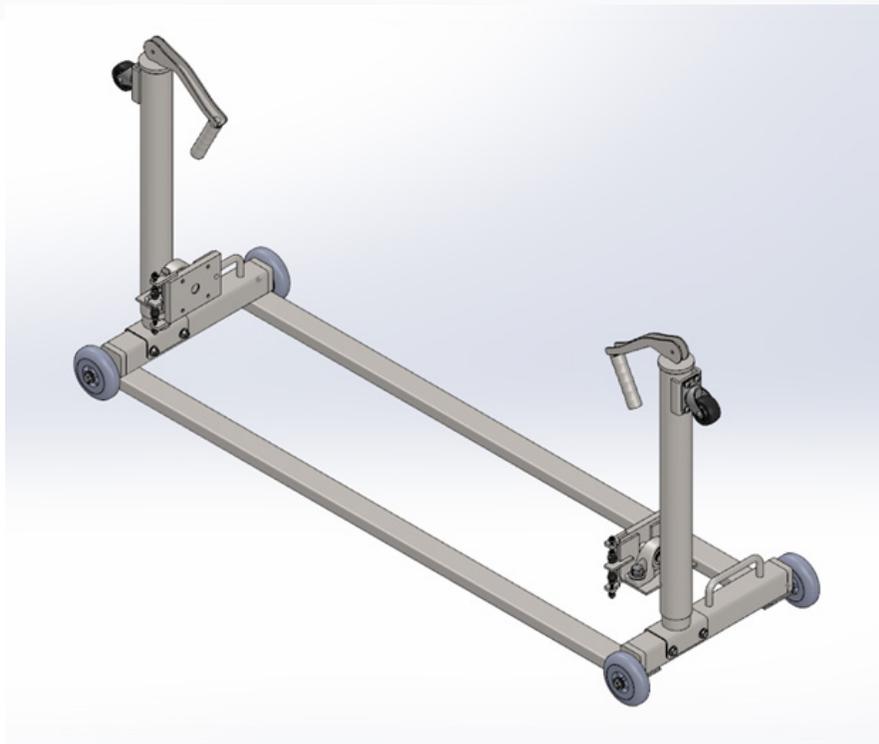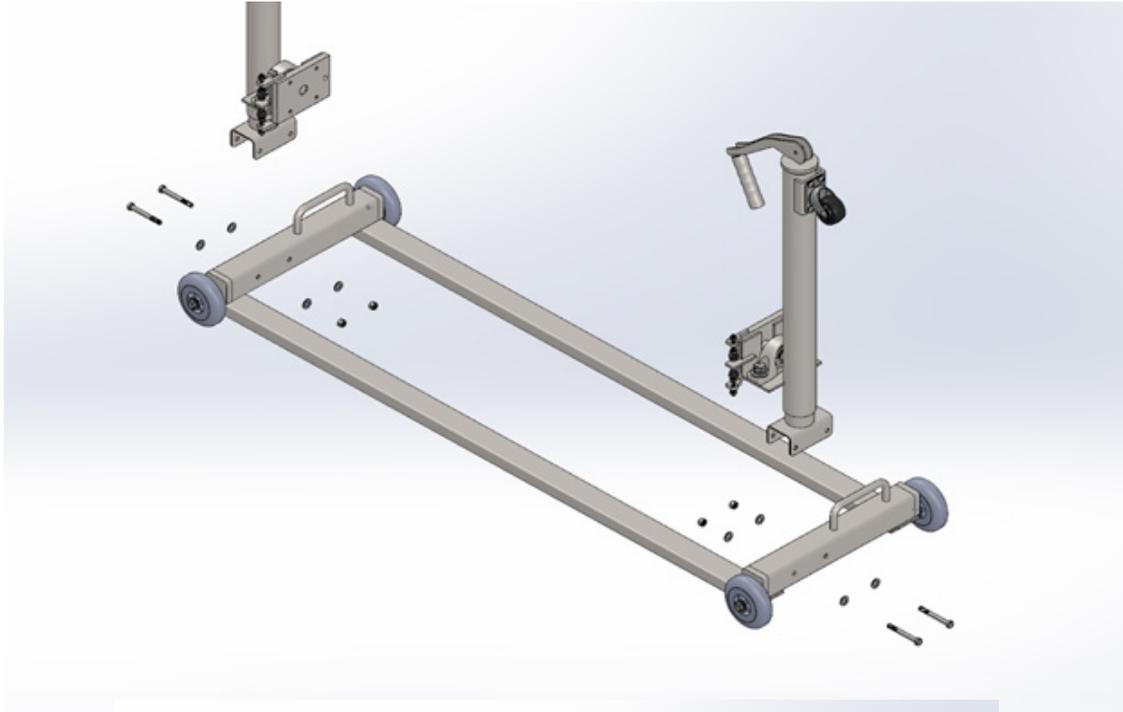


## STEP 2

Place the cradle inbetween the jack uprights and use Hardware D to secure the cradle to the jacks.

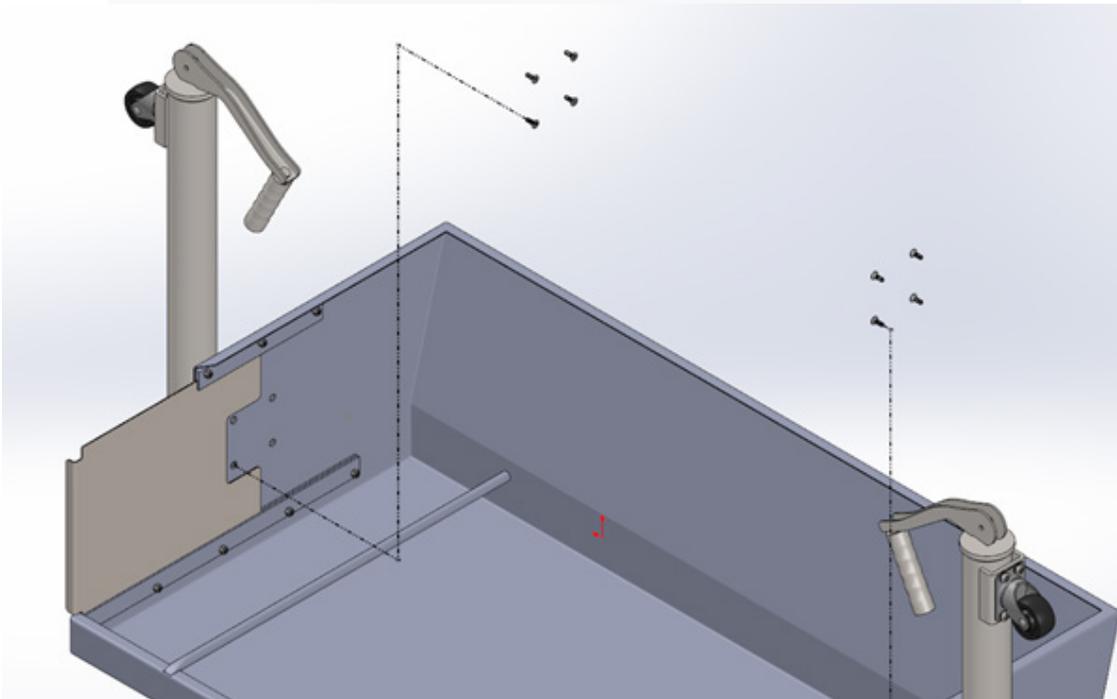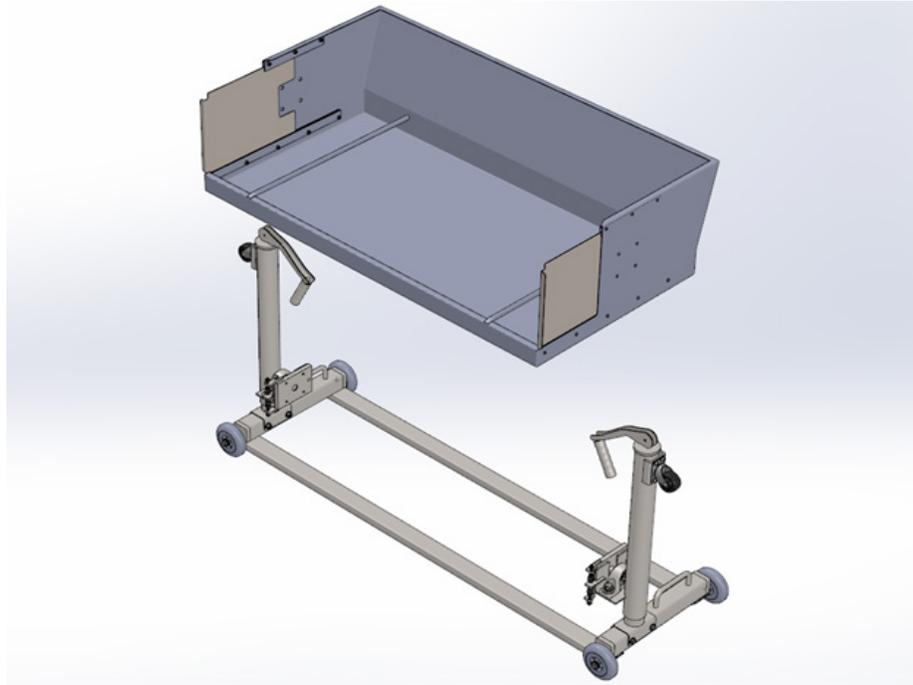

# PTAC UNIT OVERVIEW

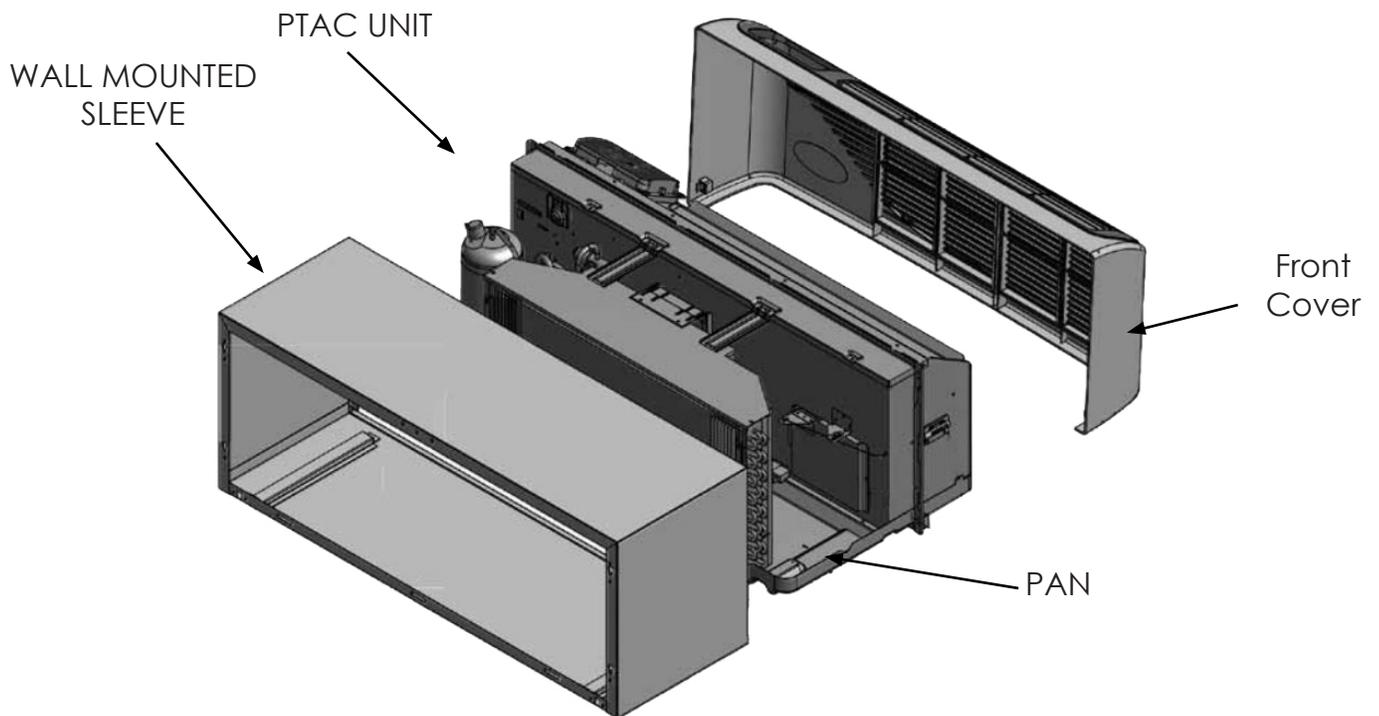


## INSTRUCTIONS


1. Unplug the PTAC power cord from the wall outlet and position it where it will remain dry.
2. Remove the front panel that covers the front of the entire PTAC unit.



3. Place a Shower cap over the switch panel to protect electronics.
4. Remove the 4 screws that secure the PTAC to the wall mounted sleeve

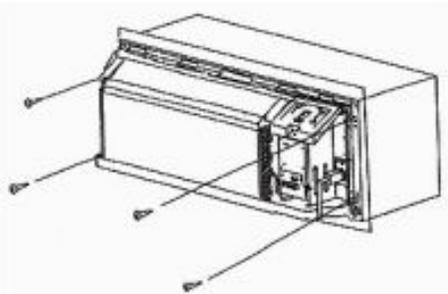

5. Move furniture as needed so you can easily maneuver the PTAC CRADLE.
6. Position the cradle about 2" in front of the PTAC wall sleeve.
7. Pivot the front of the cradle up by releasing the pins on the sides of the Jack uprights. Lock into place with the pins.
8. Turn the jack handle cranks so that the front touches the bottom of the ptac. Do not let the jacks lift or put upward force on the ptac. Only a bare minimum of contact is necessary. Since the jacks lift independently of each other, make sure your cradle is level.
9. Make sure sliding barn doors are shut.
10. Take hold of top of PTAC and slide into cradle firmly

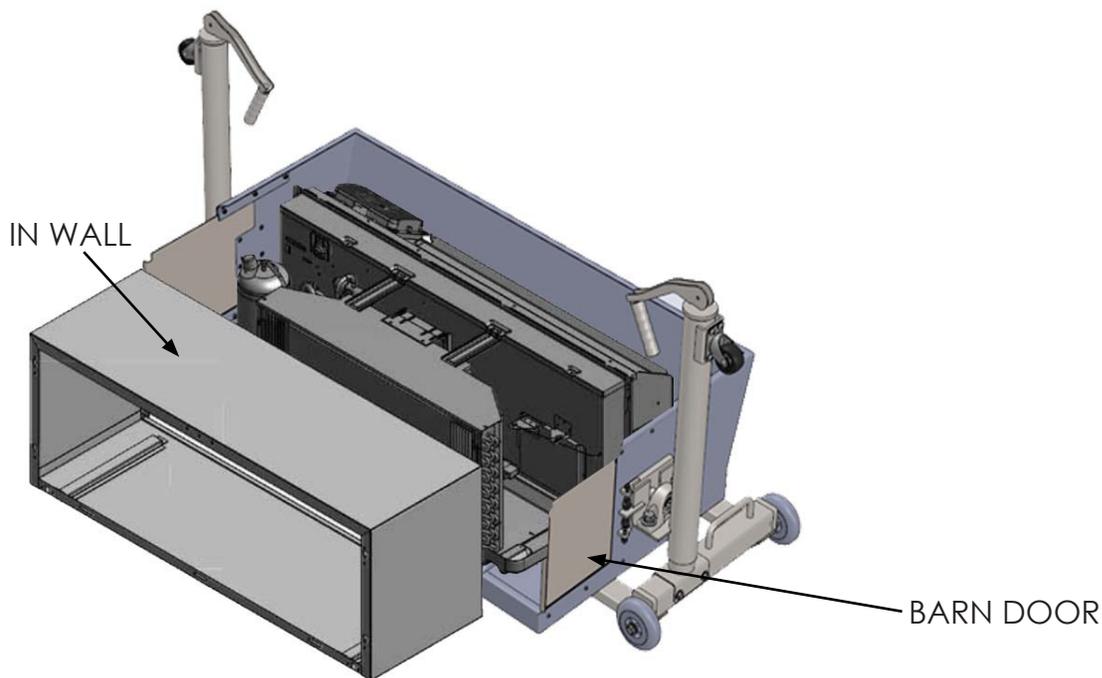

11. Using your 2 gallon chemical sprayer with pre mixed chemical, spray the rear condenser, pan, front evaporator core, heating element, side filter and any part of the fan that is accessible. Do not spray the switch panel.
12. Slide left barn door open. Attach your GALAXY PTAC MACHINE vacuum hose to the left side of the PTAC pan and close barn door.
13. Using the jacks, lower the side of the CRADLE with the vacuum hose. This will direct the flow of the water toward the hose. You can also adjust the front/back tilt function, as needed.
14. Using the GALAXY machine's solution hose and spray wand, rinse all the components that were previously sprayed from the top down. Using the sprayer's stream, direct dirt and debris toward the vacuum hose intake.
15. Vacuum up any residual moisture on the PTAC pan

16. If needed, push the cradle to the side and clean the wall mounted sleeve. Use the galaxy wand to spray pressurized liquid into the condensation drain pipe. This can prevent future clogs.
17. Place pan treatment tablets in pan and on front evaporator core.
18. Raise or lower the cradle so that the PTAC is at the appropriate level to be easily inserted.
19. In one swift motion, push the PTAC unit back into the sleeve with hands on top of PTAC.
20. If needed, place the outer front cover into CRADLE and spray it down.
21. Reinstall the front cover.
22. Plug in power cord and test.
23. Vacuum up excess liquid and debris in the cradle.

PLEASE SCAN THIS QR CODE TO ACCESS AN OPERATIONS VIDEO





Quality Above All

# Register Your Warranty Online:

It is quick and easy to register your product warranty online, visit our website at:

[www.edic-usa.com/warranty](http://www.edic-usa.com/warranty)

## EDIC STANDARD LIMITED WARRANTY PLAN FOR MACHINES MANUFACTURED AFTER 2/14/2017

The following Limited 5-year Warranty is given by EDIC for the following specific EDIC products:

Aqua Dri	Endeavor	Galaxy Pro PTAC	Saturn HD Low Speed
Atlas	Fivestar	Heat N Run	Saturn High Speed
Bravo	Galaxy 2000	Polaris	Saturn Low Speed
Counter Strike	Galaxy 5	PTAC Cleaning Cradle™	Supernova
CR2 Restroom Cleaner	Galaxy Pro	Saturn Dual Speed	

The following Warranty is given by EDIC for the following specific EDIC products:

2 Years Parts & Labor	TORO HD Orbital	TORO Orbital
FloodBuster	1725-TES has a 4-year parts warranty and a 2-year labor warranty	1725-TPT has a 2-year parts warranty and a 1-year labor warranty
Dynamo Vacuums		
Galaxy Automotive Extractors		

**LIFETIME** on rotationally molded polyethylene tanks, stainless steel heater tank, and Saturn stainless steel brush covers.

**5 YEARS** on service labor, and all other parts not covered by the Lifetime terms.

**2 YEARS** on service labor, and all other parts not covered by the Lifetime terms.

### EDIC REPLACEMENT PARTS LIMITED WARRANTY PLAN

All parts sold as replacement parts for out-of-warranty EDIC products have the following Limited Warranty, with no warranty on labor: **30 DAYS**

Your product is warranted to be free of defects in material and workmanship for the period set forth above, after the date of delivery to the retail purchaser, when operated in normal service and used in accordance with the operating and maintenance instructions in the Owner’s Manual. This warranty is limited to and provides at no cost to the retail purchaser repair or replacement of parts determined to be defective, at EDIC’s option, and labor, if provided for above, to replace or repair the parts (“service labor”) according to EDIC’s Standard Rates, during the warranty period set forth above. This warranty excludes transportation charges unless authorized in writing by EDIC. No warranty returns for refund or credit will be permitted. In the event of a defect, these are your exclusive remedies. Warranty claims must be made in writing to EDIC prior to returning the product and no products will be accepted for repair or replacement without prior authorization by EDIC. Use of parts not approved by EDIC in EDIC products will void this warranty. Warranty repair or replacement shall not extend the original warranty period of the product, and replacement parts used for in-warranty repairs will only be warranted for the remainder of the original warranty and not from their installation date. Any parts or products replaced under this Limited Warranty will become the property of EDIC.



*Quality Above All*

**EXCEPTIONS AND EXCLUSIONS FROM THE WARRANTY.** This Limited Warranty only covers product issues caused by defects in material or workmanship during normal service. It does not cover product issues from any other cause, including but not limited to (a) transportation damages; (b) alteration by unauthorized persons; (c) unauthorized use, unreasonable use, misuse, or abuse (including the use of incompatible or corrosive chemicals or overloading of capacity); (d) failure caused by lack of proper maintenance and cleaning; (e) normal wear on items such as cords, belts, hoses, switches, bumpers, gaskets, seals, carbon brushes, squeegees, harnesses, valves, cams, extraction brushes, bearings, handle grips, filters and finishes; (f) acts of God; or (g) modification of or any part of the product. This Limited Warranty does not cover EDIC products sold AS IS and WITH ALL FAULTS. This Limited Warranty is valid only in the United States and Canada.

We suggest that you complete and return the enclosed product registration card promptly to facilitate verification of the date of the original purchase. However, the return of the product registration card does not eliminate the need for the retail purchaser to maintain the original proof of the purchase to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

For specific information on how to obtain warranty services for your product, please write to:

EDIC/Warranty Department

1753 Blake Ave.

Los Angeles, CA 90031

**THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE OF THIS STATEMENT. THERE IS NO IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY USE ON THESE GOODS.**

**NO IMPLIED WARRANTY, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, APPLIES TO THE PRODUCT AFTER THE APPLICABLE PERIOD OF THE EXPRESS LIMITED WARRANTY STATED ABOVE, AND NO OTHER EXPRESS WARRANTY, EXCEPT AS MENTIONED ABOVE, GIVEN BY ANY PERSON OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BIND EDIC. EDIC SHALL NOT BE LIABLE FOR ANY FORM OF ACTION FOR ANY DAMAGES, WHETHER DIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR INDIRECT, TO PROPERTY OR PERSON, INCLUDING BUT NOT LIMITED TO, DAMAGE OR LOSS OF INCOME, LOSS OF PRODUCTION, OR LOSS OF PROFITS DUE TO MALFUNCTIONING OF ANY PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED. IN NO EVENT SHALL RECOVERY OF ANY KIND AGAINST EDIC BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY EDIC, AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, YOU ASSUME ALL THE RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO YOU AND YOUR PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF USE OR MISUSE OF, OR INABILITY TO USE, THE PRODUCT NOT CAUSED DIRECTLY BY NEGLIGENCE OF EDIC. THIS LIMITED WARRANTY STATES YOUR EXCLUSIVE REMEDY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This Limited Warranty gives you specific legal rights and you may have other rights which vary from state to state (or province).

0900.002/9989