




T5

Scrubber-Dryer

Operator Manual

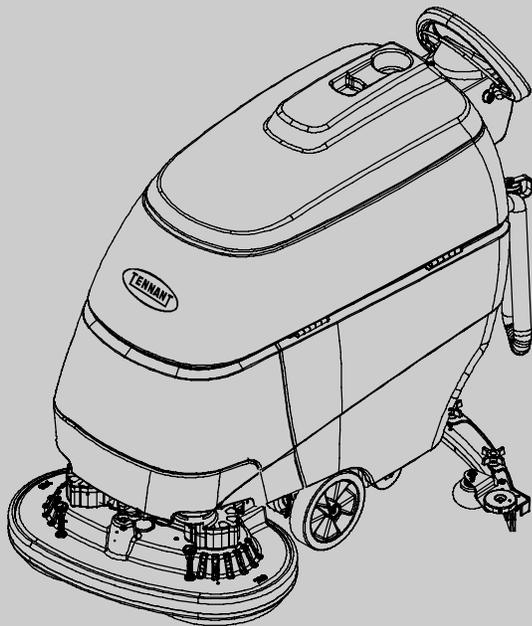

The Safe Scrubbing Alternative®



ELECTRICALLY CONVERTED WATER

Hygenic® Fully Cleanable Tanks
QA Controls™ Supervisor Settings

North America / International

www.tennantco.com

9002326
Rev. 06 (11-2008)



OPERATION

This manual is furnished with each new model. It provides necessary operation and maintenance instructions.

Read this manual completely and understand the machine before operating or servicing it.

A complete illustrated Parts Manual is also furnished with each new model. Use the Parts Manual to order replacement parts. To ensure prompt delivery, follow the "HOW TO ORDER PARTS" instructions printed in the Parts Manual.

This machine will provide excellent service. However, the best results will be obtained at minimum costs if:

- The machine is operated with reasonable care.
- The machine is maintained regularly - per the machine maintenance instructions provided.
- The machine is maintained with manufacturer supplied or equivalent parts.



PROTECT THE ENVIRONMENT

Please dispose of packaging materials, old machine components such as batteries, hazardous fluids, including anti-freeze and oil, in an environmentally safe way according to local waste disposal regulations.



Always remember to recycle.

MACHINE DATA

IMPORTANT: To ensure full warranty protection, fill out the attached MACHINE INSTALLATION / WARRANTY REPORT REPLY CARD and return to Tennant within 30 days of purchase.

Please fill out at time of installation for future reference.

Model No. - _____

Serial No. - _____

Machine Options - _____

Sales Rep. - _____

Sales Rep. phone no. - _____

Customer Number - _____

Installation Date - _____

TENNANT Company
PO Box 1452
Minneapolis, MN 55440
Phone: (800) 553-8033 or (763) 513-2850

www.tennantco.com

FaSK-PAK and 1-STEP are US registered and unregistered trademarks of Tennant Company.

Specifications and parts are subject to change without notice.

Copyright © 2006, 2007, 2008 TENNANT COMPANY, Printed in U.S.A.
All rights reserved.

TABLE OF CONTENTS

| | | | |
|--|-----------|--|-----------|
| SAFETY PRECAUTIONS | 4 | CHARGING BATTERIES | 17 |
| SAFETY LABELS | 5 | BATTERY CHARGER SPECIFICATIONS: .. | 17 |
| MACHINE COMPONENTS | 6 | ON-BOARD BATTERY CHARGER | |
| CONTROL PANEL COMPONENTS | 7 | SETTINGS: | 17 |
| MACHINE INSTALLATION | 8 | USING THE ON-BOARD | |
| UNCRATING MACHINE | 8 | BATTERY CHARGER | 18 |
| INSTALLING BATTERIES | 8 | ON-BOARD BATTERY | |
| HOW THE MACHINE WORKS | 9 | CHARGER ERROR CODES | 19 |
| BRUSH AND PAD INFORMATION | 9 | ON-BOARD CHARGER | |
| MACHINE SETUP | 9 | FUSE REPLACEMENT | 20 |
| ATTACHING SQUEEGEE ASSEMBLY | 9 | USING AN OFF-BOARD BATTERY | |
| INSTALLING BRUSHES | 10 | CHARGER (OPTION) | 20 |
| INSTALLING FaST-PAK | | ADJUSTING SCRUB HEAD BRUSHES | 21 |
| CARTON (FaST Model) | 11 | DISK MODEL | 21 |
| FILLING SOLUTION TANK | 12 | CYLINDRICAL BRUSH MODEL | 21 |
| MACHINE OPERATION | 12 | MACHINE MAINTENANCE | 23 |
| PRE-OPERATION CHECKS | 12 | DAILY MAINTENANCE | 23 |
| STARTING THE MACHINE | 12 | MONTHLY MAINTENANCE | 25 |
| EMERGENCY STOPPING | 14 | BATTERY MAINTENANCE | 26 |
| WHILE OPERATING MACHINE | 14 | SQUEEGEE BLADES | 26 |
| BATTERY CHARGE LEVEL INDICATOR ... | 14 | MOTOR MAINTENANCE | 27 |
| HOUR METER | 15 | FaST SYSTEM MAINTENANCE | 27 |
| OFF-AISLE WAND SETUP | | ec-H ₂ O MODULE FLUSH PROCEDURE ... | 28 |
| AND OPERATION | 15 | JACKING UP MACHINE | 28 |
| DRAINING AND CLEANING TANKS | 16 | TRANSPORTING MACHINE | 29 |
| DRAINING RECOVERY TANK | 16 | STORING MACHINE | 29 |
| DRAINING SOLUTION TANK | 17 | FREEZE PROTECTION | 29 |
| | | RECOMMENDED STOCK ITEMS | 31 |
| | | TROUBLESHOOTING | 31 |
| | | CONTROL PANEL FAULT INDICATOR CODES | 34 |
| | | MACHINE SPECIFICATIONS | 35 |
| | | MACHINE DIMENSIONS | 37 |

SAFETY PRECAUTIONS

This machine is intended for industrial and commercial use. It is designed exclusively to scrub hard floors in an indoor environment and is not constructed for any other use. Only use recommended pads, brushes and commercially approved floor cleaners intended for machine application.

The following warning alert symbol and the "FOR SAFETY" heading are used throughout this manual as indicated in their description:

 **WARNING:** To warn of hazards or unsafe practices which could result in severe personal injury or death.

FOR SAFETY: To identify actions which must be followed for safe operation of equipment.

The following safety precautions signal potentially dangerous conditions to the operator or equipment. All operators must read, understand and practice them.

 **WARNING:** Fire Or Explosion Hazard

- Never Use Flammable Liquids Or Operate Machine In Or Near Flammable Liquids, Vapors Or Combustible Dusts.

This machine is not equipped with explosion proof motors. The electric motors will spark upon start up and during operation which could cause a flash fire or explosion if machine is used in an area where flammable vapors/liquids or combustible dusts are present.

- Do Not Pick Up Flammable Materials Or Reactive Metals.
- Batteries Emit Hydrogen Gas. Keep Sparks And Open Flame Away. Keep Battery Compartment Open When Charging.

 **WARNING:** Electrical Hazard

- Disconnect Battery Cables and Charger Plug Before Servicing Machine.
- Do Not Charge Batteries with Damaged Power Supply Cord. Do Not Modify Plug.

If the charger supply cord is damaged or broken, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

 **WARNING:** Spinning Brush. Keep Hands Away. Turn Off Power Before Working On Machine.

FOR SAFETY:

1. Do not operate machine:
 - With flammable liquids or near flammable vapors as an explosion or flash fire may occur.
 - Unless trained and authorized.
 - Unless operator manual is read and understood.
 - If not in proper operating condition.
2. Before starting machine:
 - Make sure all safety devices are in place and operate properly.
3. When using machine:
 - Go slow on inclines and slippery surfaces.
 - Wear non-slip shoes.
 - Reduce speed when turning.
 - Report machine damage or faulty operation immediately.
 - Never allow children to play on or around.
 - Follow mixing and handling instructions on chemical containers.
 - Do not operate on inclines that exceed 5% (3°).
4. Before leaving or servicing machine:
 - Stop on level surface.
 - Turn off machine.
 - Set parking brake, if equipped.
 - Remove key.
5. When servicing machine:
 - Avoid moving parts. Do not wear loose jackets, shirts, or sleeves.
 - Disconnect battery cables and charger plug before working on machine.
 - Wear protective gloves and eye protection when handling batteries or battery cables.
 - Avoid contact with battery acid.
 - Wear protective gloves and eye protection when handling white vinegar.
 - Do not power spray or hose off machine. Electrical malfunction may occur.
 - Jack machine up at designated locations only (See JACKING UP MACHINE).
 - Use hoist or jack that will support machine weight.
 - Use manufacturer supplied or approved replacement parts.
 - All repairs must be performed by a qualified service person.
 - Do not modify the machine from its original design.

6. When loading/unloading machine onto/off truck or trailer:
- Drain tanks before loading.
 - Use a ramp that can support the machine weight and person loading it. Do not exceed a 11° ramp incline at a ramp length of 12 ft (3.7m).

- Turn machine off.
- Put scrub head in the lowered position.
- Block machine wheels.
- Use tie-down straps to secure machine.
- Set parking brake, if equipped.

SAFETY LABELS

The safety labels appear on the machine in the locations indicated. Replace labels if they are missing or become damaged or illegible.



WARNING LABEL -
Located on recovery tank cover.

| ⚠ WARNING | |
|---|---|
|    |  |
| <p>EXPLOSION, FIRE AND SHOCK HAZARD. AVOID INJURY.</p> <ul style="list-style-type: none"> • Do Not Use or Pick Up Flammable Materials. • Do Not Use Near Flammable Liquids, Vapors or Combustible Dusts. • Disconnect Battery Cables and Charger Cord Before Servicing. • Keep Sparks and Open Flame Away When Charging Batteries. Keep Battery Hood Open When Charging. | |
| ⚠ AVERTISSEMENT | |
| <p>RISQUE D'EXPLOSION, D'INCENDIE ET DE DÉCHARGE. ÉVITEZ LES BLESSURES.</p> <ul style="list-style-type: none"> • N'utilisez Pas ou Ne Ramassez Pas de Matériaux Inflammables. • N'utilisez Pas Près de Liquides, Vapeurs ou Poussières Inflammables. • Débranchez les Câbles de Batterie et le Cordon du Chargeur Avant l'Entretien. • Eloignez les Sources d'Étincelles ou de Flamme Ouverte Lors du Chargement des Batteries. Laissez Ouvert le Capot du Compartiment des Batteries Lors de la Mise en Charge. | |
| ⚠ ADVERTENCIA | |
| <p>PELIGRO DE EXPLOSIÓN, FUEGO, DESCARGA EVITE LESIONES.</p> <ul style="list-style-type: none"> • No Use Ó Recoja Materiales Flamables. • No Use Cerca De Líquidos Flamables, Vapores Ó Materiales Combustibles. • Desconecte Cable De Batería Y Cable Del Cargador Antes Del Mantenimiento. • Mantenga Chispas Y Fuego Alejados Mientras Carga Baterías. Mantenga Tapa De Batería Abierta Mientras Carga. | |
| 1026387 | |



SPINNING BRUSH LABEL - Located on scrub head


⚠ WARNING: Spinning Brush. Keep Hands Away. Turn Off Power Before Working On Machine.



BATTERY CHARGE LABEL -
Located on bottom side of recovery tank.

⚠ WARNING: Fire Or Explosion Hazard. Batteries Emit Hydrogen Gas. Keep Sparks And Open Flame Away. Keep Battery Compartment Open When Charging.


MACHINE COMPONENTS

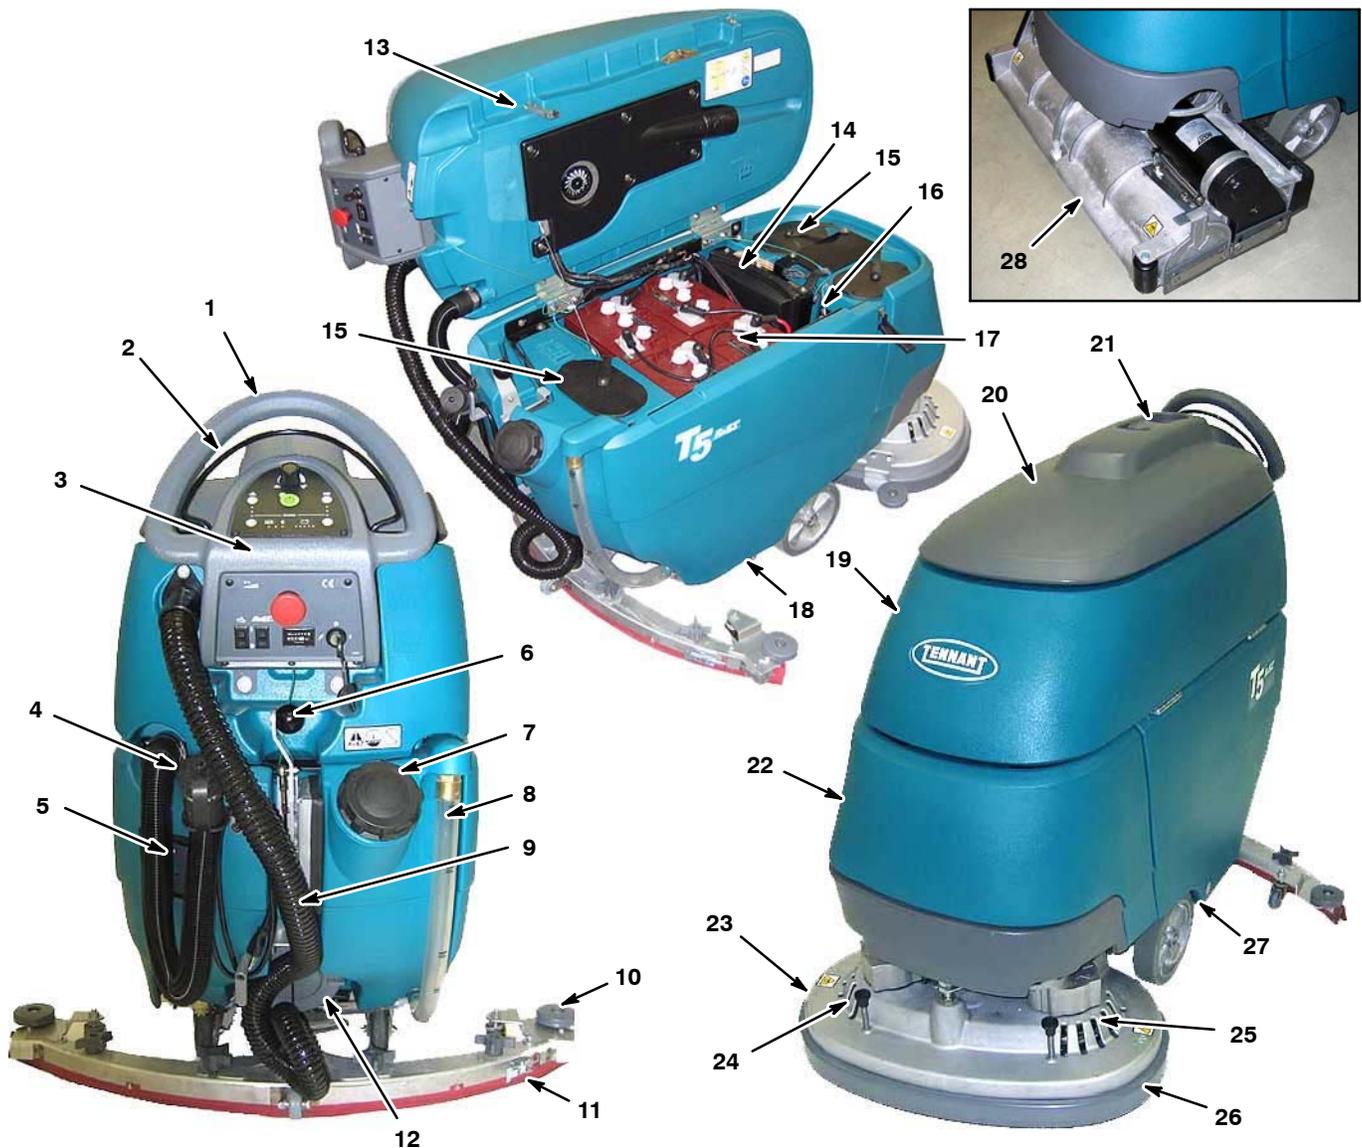

- 1. Control Handle
- 2. Control Handle Start Bail
- 3. Upper & Lower Control Panels
- 4. Recovery Tank Drain Hose
- 5. On-board Battery Charger
- 6. Squeegee Lift Lever
- 7. Rear Fill-Port
- 8. Solution Tank Level/Drain Hose
- 9. Squeegee Vacuum hose
- 10. Wall Rollers
- 11. Squeegee Assembly
- 12. Solution Tank Clean-Out Port
- 13. Recovery Tank Support Stand
- 14. Control Board
- 15. Bucket Fill Port/Clean-out Port

- 16. FaST-PAK Carton Compartment (FaST Model)
ec-H2O System Module (*ec-H2O* Model)
- 17. Batteries
- 18. Off-Aisle Wand Solution Hose Coupler
- 19. Recovery Tank
- 20. Recovery Tank Cover
- 21. Cup Holder
- 22. Solution Tank
- 23. Disk Scrub Head
- 24. Pad Release Plunger
- 25. Pad Driver Window
- 26. Scrub Head Skirt
- 27. Parking Brake (option)
- 28. Cylindrical Brush Scrub Head

CONTROL PANEL COMPONENTS

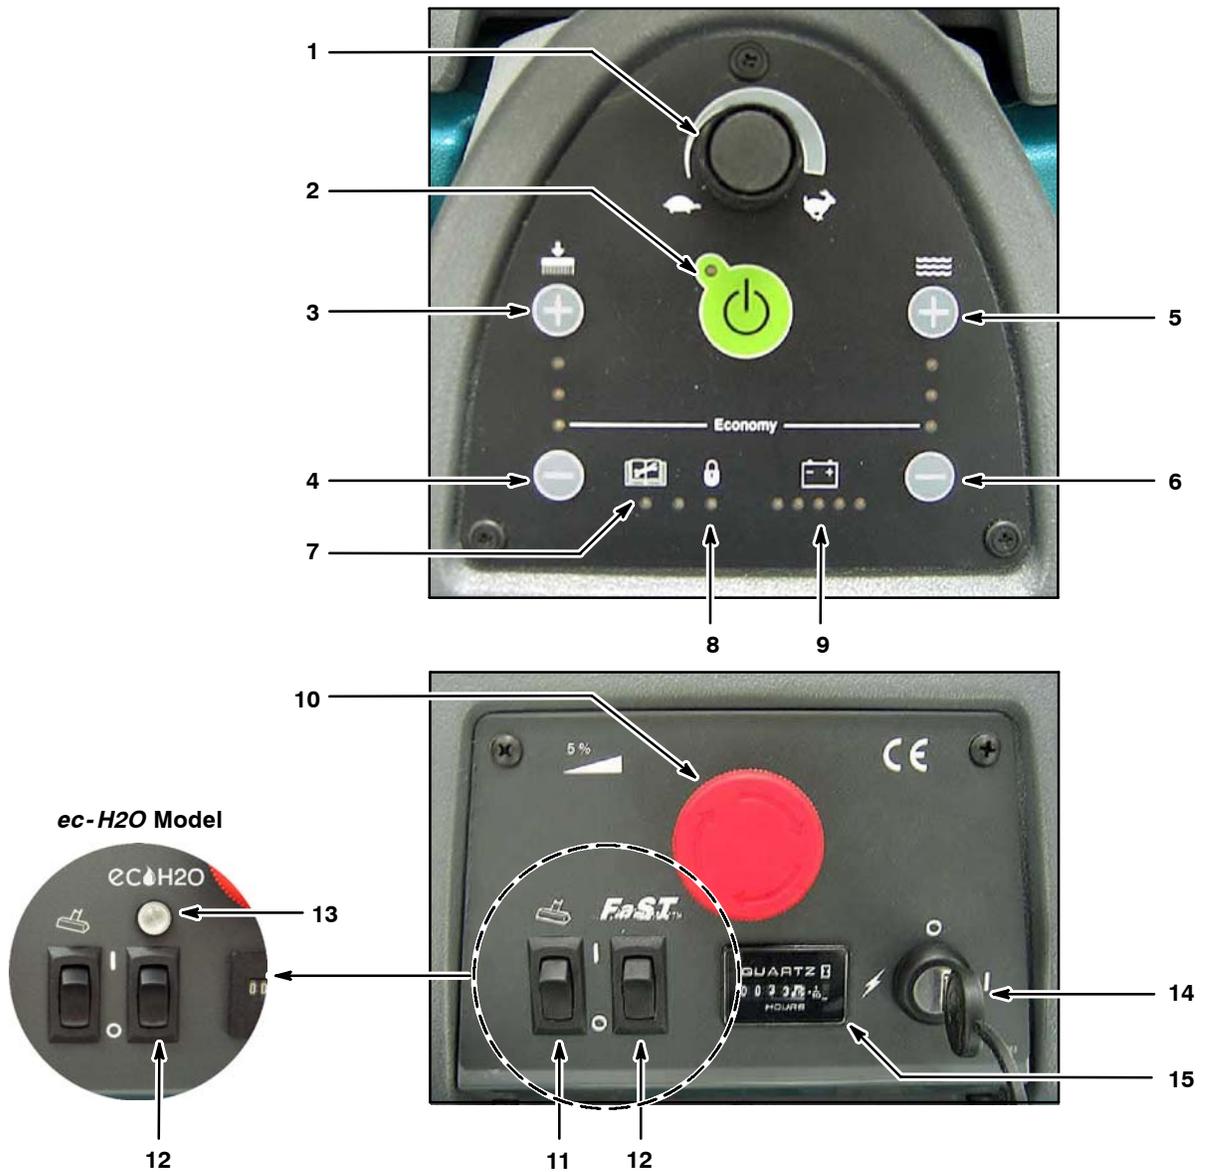

- | | |
|--|---|
| <ul style="list-style-type: none"> 1. Speed control knob 2. 1-STEP scrub button 3. Brush pressure increase button (+) 4. Brush pressure decrease button (-) 5. Solution flow increase button (+) 6. Solution flow decrease button (-) 7. Fault indicator - Contact Service 8. Supervisor control indicator - Lockout feature | <ul style="list-style-type: none"> 9. Battery charge level indicator 10. Emergency stop button (option) 11. Off-Aisle wand on/off switch (option) 12. FaST system on/off switch (FaST model) ec-H2O system on/off switch (ec-H2O model) 13. ec-H2O system indicator light (ec-H2O model) 14. Main power on/off key switch 15. Hour meter |
|--|---|

OPERATION

MACHINE INSTALLATION

UNCRATING MACHINE

1. Carefully check the shipping crate for signs of damage. Report damage at once to carrier.
2. Check the contents list. Contact distributor for missing items.

Contents:

- 4-6 V Batteries-Optional
- 3-Battery Cable Jumpers
- Battery Tray
- 1-FaST-PAK 365 Concentrate-(FaST model)
- Squeegee Assembly
- 2-Pad drivers (Disk Model)
- 2-Brushes (Cylindrical Brush Model)

3. To uncrate your machine, remove the shipping hardware and straps that secure the machine to the pallet. Carefully back machine down ramp.

ATTENTION: Do not roll machine off pallet unless a ramp is used, machine damage may occur.

ATTENTION: To prevent possible machine damage, install batteries after removing machine from shipping pallet.



FIG. 1

3. Carefully install the batteries into the battery compartment tray (Figure 2). Arrange the battery posts as shown (Figure 3).



FIG. 2

4. Connect the battery cables to the battery posts as shown (Figure 3), RED TO POSITIVE (+) and BLACK TO NEGATIVE (-).

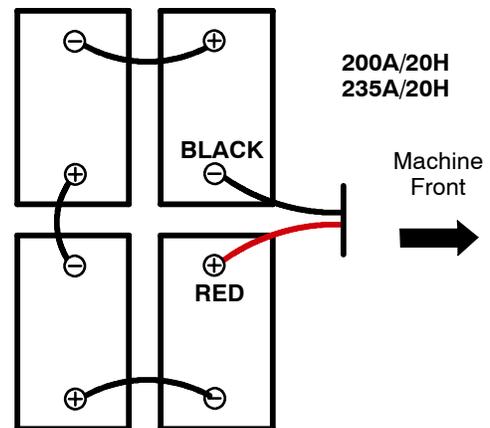


FIG. 3

IMPORTANT: If your machine is equipped with the on-board battery charger, make sure that the charger is properly set for your battery type before charging (See ON-BOARD CHARGER SETTINGS).

INSTALLING BATTERIES

⚠ WARNING: Fire Or Explosion Hazard. Batteries Emit Hydrogen Gas. Keep Sparks And Open Flame Away. Keep Battery Hood Open When Charging.

FOR SAFETY: When installing batteries, wear protective gloves and eye protection. Avoid contact with battery acid.

Battery Specifications:

Four 6 volt, 200A/20h or 235A/20h deep cycle batteries. Maximum battery dimensions: 7.5 in (190 mm) W x 10.8 in (275 mm) L x 11 in (284 mm) H.

1. Park the machine on a level surface, remove the key and set the parking brake.
2. Lift the recovery tank and remove the right side battery compartment panel (Figure 1). 13mm wrench required.

HOW THE MACHINE WORKS

Conventional Scrubbing:

Water and detergent from the solution tank flow to the floor through a solution valve. The brushes use the detergent and water to scrub the floor clean. As the machine moves forward, the squeegee wipes the dirty solution from the floor into the recovery tank.

Foam Scrubbing (FaST Model):

(FaST–Foam activated Scrubbing Technology)

Unlike conventional scrubbing, the FaST system injects the FaST-PAK concentrate formula with a small amount of water and air onto the floor. The mixture creates a large volume of expanded wet foam for the brush to scrub the floor clean. As the machine moves forward, the foam collapses and the squeegee recovers the dirty solution into the recovery tank leaving the floor clean, dry and slip free.

ec-H₂O Scrubbing (ec-H₂O Model):

(ec-H₂O–electrically converted water)

Normal water passes through a module where it is oxygenated and charged with an electric current. The electrically converted water changes into a blended acidic and alkaline solution forming a neutral pH cleaner. The converted water attacks the dirt, breaks it into smaller particles, and pulls it off the floor surface allowing the machine to easily scrub away the suspended soil. The converted water then returns to normal water in the recovery tank.

BRUSH AND PAD INFORMATION

For best cleaning results use the appropriate brush type for your cleaning application. Refer to the Parts manual for part number information.

Polypropylene Bristle Scrub Brush (Black) -

This general purpose polypropylene bristle scrub brush is used for scrubbing lightly compacted soilage. This brush works well for maintaining concrete, wood and grouted tile floors.

Soft Nylon Bristle Scrub Brush (White) -

Recommended for cleaning coated floors without removing finish. Cleans without scuffing.

Super Abrasive Bristle Scrub Brush (Gray) -

Nylon fiber impregnated with abrasive grit to remove stains and soilage. Strong action on any surface. Performs well on buildup, grease, or tire marks.

Polishing Pad (White) -

Used to maintain highly polished or burnished floors.

Buffing Pad (Red) - Used for light duty scrubbing without removing floor finish.

Scrubbing Pad (Blue) - Used for medium to heavy-duty scrubbing. Removes dirt, spills, and scuffs and leaves surface clean ready for recoating.

Stripping Pad (Brown) - Used for stripping of floor finish to prepare the floor for recoating.

Heavy Duty Stripping Pad (Black) - Used for aggressive stripping of heavy finishes/sealers, or very heavy duty scrubbing.

MACHINE SETUP

ATTACHING SQUEEGEE ASSEMBLY

1. Park the machine on a level surface, remove the key and set the parking brake if equipped.
2. Lift the squeegee lift lever to the upward position (Figure 4).



FIG. 4

3. Mount the squeegee assembly to the squeegee pivot bracket and secure with knobs (Figure 5).

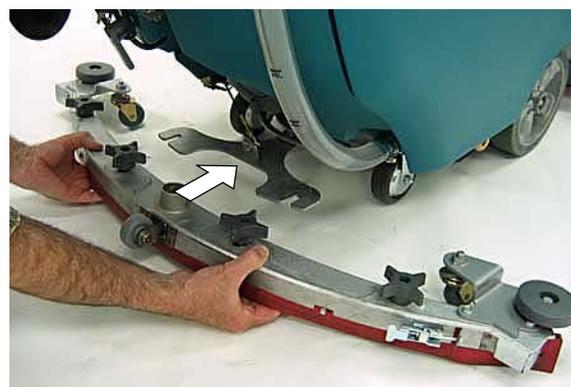


FIG. 5

OPERATION

4. Connect the vacuum hose to the squeegee assembly. Loop the hose as shown using the hose clip provided (Figure 6).

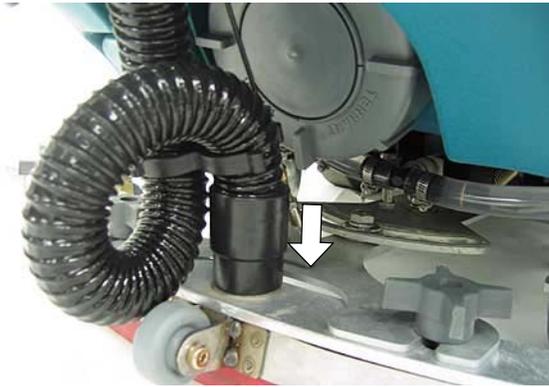


FIG. 6

5. Check the squeegee blades for proper deflection. The blades should deflect as shown (Figure 7).



FIG. 7

6. To adjust the blade deflection, place the squeegee assembly on a level surface and adjust the casters as shown (Figure 8).

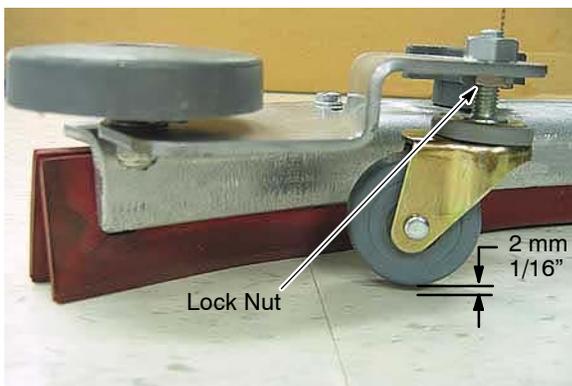


FIG. 8

INSTALLING BRUSHES/PADS

FOR SAFETY: Before installing brushes or pad drivers, stop machine on level surface, remove key and set parking brake if equipped.

Disk Model:

1. Raise scrub head off the floor and remove key.
2. Attach the pad to the pad driver before installing the driver. Secure pad with centerlock (Figure 9).

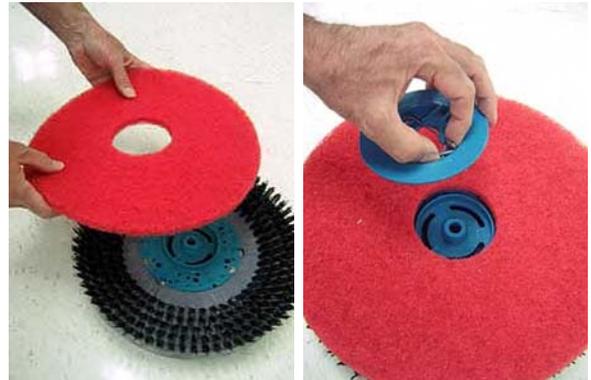


FIG. 9

3. Align the pad driver under the motor hub and push it upward to engage (Figure 10).



FIG. 10

4. To remove the pad driver, raise the scrub head and push the pad release plunger downward (Figure 11).



FIG. 11

5. Check the scrub head to ensure that it is properly adjusted (See ADJUSTING SCRUB HEAD BRUSHES).

Cylindrical Brush Model:

1. Raise scrub head off the floor and remove key.
2. Remove idler plate from scrub head by pressing the spring tab downward (Figure 12).



FIG. 12

3. Attach idler plate to the brush end that has the double row of bristles (Figure 13). Install brush.

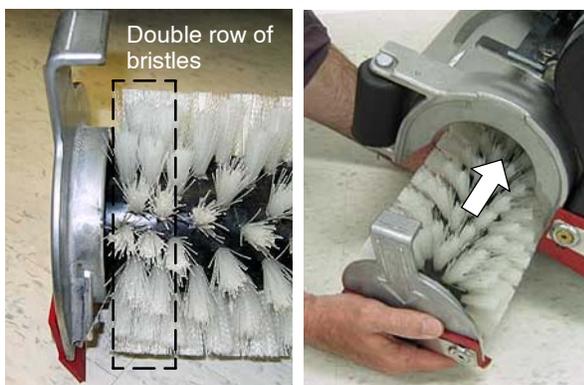


FIG. 13

4. Check the brushes to ensure they are properly adjusted (See ADJUSTING SCRUB HEAD BRUSHES).

INSTALLING FaST-PAK CARTON (FaST Model)

ATTENTION: The FaST-PAK Concentrate Formula is specifically designed for the FaST system. NEVER use a substitute. Machine damage may result.

1. Pull out the hose connector from the FaST-PAK carton and remove cap (Figure 14).

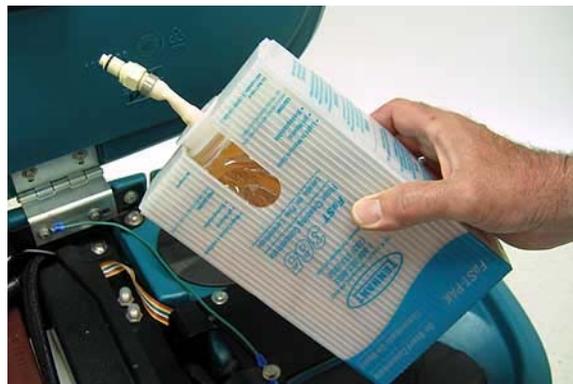


FIG. 14

2. Open the battery compartment. Connect the FaST-PAK carton to the supply hose and place carton in compartment (Figure 15). **Make sure the hose does not get pinched.**



FIG. 15

3. When the supply hose is not in use, connect the storage plug to prevent the FaST system from drying out and clogging up the hose (Figure 16).



FIG. 16

OPERATION

FILLING SOLUTION TANK

Using a hose or bucket, fill the solution tank to the “MAX 85L” mark (Figure 17).

For Conventional Scrubbing: Use hot water (140°F/60°C maximum). Pour a recommended cleaning detergent into the solution tank according to mixing instructions on the container.

For FaST or *ec-H2O* Scrubbing: Use cool clean water only (less than 70°F/21°C). Do not add any conventional floor cleaning detergents, system failure may result.



FIG. 17

ATTENTION: For Conventional Scrubbing, only use commercially approved cleaning detergents. Machine damage due to improper detergent usage will void the manufacturer’s warranty.

⚠ WARNING: Fire or Explosion Hazard. Never Use Flammable Liquids.

MACHINE OPERATION

FOR SAFETY: Do not operate machine, unless operator manual is read and understood.

⚠ WARNING: Fire Or Explosion Hazard. Never Operate Machine In Or Near Flammable Liquids, Vapors Or Combustible Dusts.

PRE-OPERATION CHECKS

- Sweep area.
- Check the battery charge level indicator.
- Check the brushes/pads for wear.
- Check the squeegee blades for wear and proper adjustment.
- Make sure the recovery tank is empty and the float shut-off screen is installed and clean.
- Check the scrub head skirt for wear.
- For FaST Scrubbing:** Check the FaST-PAK concentrate level.
- For FaST or *ec-H2O* Scrubbing:** Make sure the solution tank is filled with cool clean water only.
- For FaST or *ec-H2O* Scrubbing:** Ensure that all conventional cleaning agents are drained and rinsed from solution tank.

STARTING THE MACHINE

1. Release the parking brake if equipped (Figure 18).
2. Turn the key to the on (I) position (Figure 18).



FIG. 18

3. **FaST Model:** Press the FaST system switch to the on (I) position (Figure 19).

ec-H2O Model: Press the *ec-H2O* system switch to the on (I) position (Figure 19).

NOTE: The *ec-H2O* system indicator light will not turn on until the machine starts scrubbing.

IMPORTANT: NEVER turn the FaST/ec-H2O system switch on when conventional scrubbing. Conventional cleaning detergents/restorers may cause failure to the FaST/ec-H2O solution system. Drain, rinse and refill solution tank with cool clean water before operating the FaST/ec-H2O system.



FIG. 19

4. Lower the squeegee assembly to floor by lowering the squeegee lift lever (Figure 20).



FIG. 20

5. Press the 1-STEP scrub button (Figure 21).



FIG. 21

6. Pull the control handle bail to start scrubbing (Figure 22). To reverse the machine, simply push the control handle bail forward. Raise squeegee when reversing machine.

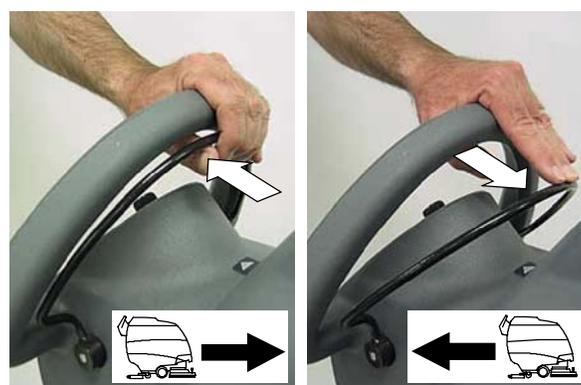


FIG. 22

7. Adjust the speed control knob to a desired scrubbing speed (Figure 23).

NOTE: 148-197 ft (45-60 meters) per minute is the recommended scrubbing speed.



FIG. 23

8. Press the brush pressure and solution flow buttons to increase (+) or decrease (-) as needed (Figure 24). To shut off the solution flow, continue to press the decrease button (-) until the lights turn off.

NOTE: For the FaST and ec-H2O models, the solution flow rate is fixed and requires no adjustment. The ec-H2O module has optional flow rate settings. If solution flow adjustments are required, contact an Authorized Service Center.



FIG. 24

9. To stop scrubbing, release the control handle bail, press the 1-STEP scrub button and raise the squeegee.

OPERATION

EMERGENCY STOPPING

Strike the emergency stop button, if equipped, in the event of an emergency (Figure 25). This button shuts off all power to machine. Turn the button clockwise and restart the key to regain power.



FIG. 25

WHILE OPERATING MACHINE

⚠ WARNING: Fire Or Explosion Hazard. Do Not Pick Up Flammable Materials Or Reactive Metals.

1. Overlap each scrub path by 2 in (5 cm).
2. Keep the machine moving to prevent damage to floor finish.
3. Do not operate the machine on inclines that exceed 5% (3°). 
4. Conventional scrubbing: Pour a commercially approved foam control solution into the recovery tank if excessive foam appears.

ATTENTION: Do not allow foam to enter the float shut-off screen, vacuum motor damage will result. Foam will not activate the float shut-off screen.

5. For heavily soiled areas, use the double scrubbing method. First scrub the area with the squeegee up, let solution set for 3-5 minutes, then scrub the area a second time with squeegee down.
6. When leaving the machine unattended, remove the key and set the parking brake, if equipped.
7. If the machine detects a fault, the control panel lights will blink a fault code (See CONTROL PANEL FAULT INDICATOR CODES).
8. **ec-H2O Model:** If an alarm sounds and the ec-H2O system indicator light begins to blink red, the ec-H2O module must be flushed to resume ec-H2O operation (See ec-H2O MODULE FLUSH PROCEDURE) (Figure 26).

NOTE: When the alarm sounds and the light blinks red, the machine will bypass the ec-H2O system. To continue scrubbing, turn the ec-H2O switch off and change over to conventional scrubbing.

ATTENTION: (ec-H2O model) Do not allow solution tank to run dry. ec-H2O module failure may result if operated without water for an extended period.



FIG. 26

| ec-H2O SYSTEM INDICATOR LIGHT CODE | CONDITION |
|------------------------------------|------------------------|
| Solid green | Normal operation |
| Blinking red | Flush ec-H2O module |
| Solid red | Contact Service Center |

BATTERY CHARGE LEVEL INDICATOR

The battery charge level indicator displays the charge level of the batteries (Figure 27). When the batteries are fully charged, all five indicator lights will glow. As the batteries discharge, the indicator lights will begin to go out from right to left.

When the discharge level reaches the red light, the operator will have approximately one minute to continue scrubbing. When the red light begins to flash the scrubbing functions will automatically shut off to alert the operator to recharge the batteries. By pressing the 1-STEP scrub button, when the red light is flashing, the operator will get an additional minute of scrubbing.

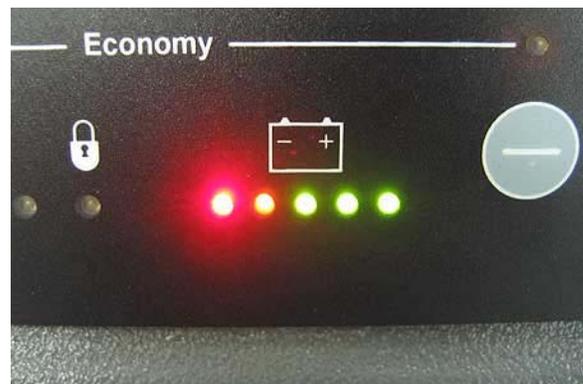


FIG. 27

HR METER

The hour meter records the number of total hours the vacuum and brush motors have been powered on. Use the hour meter to determine when to perform recommended maintenance procedures and to record service history (Figure 28). See MACHINE MAINTENANCE.



FIG. 28

OFF-AISLE WAND SETUP AND OPERATION

If your machine is equipped with the off-aisle wand option, this allows you to scrub areas where the machine is unable to reach.

Preparing Machine for Off-Aisle Wand Scrubbing:

1. Park the machine on a level surface, turn key off and set parking brake if equipped.
2. Connect the solution hose to the coupler at the lower right side of machine (Figure 29).



FIG. 29

3. Using the hose adapter, connect the squeegee hose to the wand hose (Figure 30).



FIG. 30

4. Attach the off-aisle wand to the hoses (Figure 31).



FIG. 31

Operating the Off-Aisle Wand:

1. Turn the key and wand switch to the on (I) position (Figure 32). The FaST/ec-H2O system switch is disabled when operating the wand.



FIG. 32

OPERATION

2. Lower the squeegee to activate the vacuum motor (Figure 33).



FIG. 33

3. Squeeze trigger to activate solution. Use brush for scrubbing and squeegee for pickup (Figure 34).



FIG. 34

4. After scrubbing, turn off the wand switch and squeeze the trigger for five seconds to relieve the water pressure before disconnecting the solution hose.

⚠ WARNING: Fire or Explosion Hazard. Do Not Pick Up Flammable Materials Or Reactive Metals.

DRAINING AND CLEANING TANKS

After each use, the tanks should be drained and cleaned.

DRAINING RECOVERY TANK

1. Transport machine to disposal area and turn key switch off.
2. While holding the drain hose upward, remove the cap and lower hose to drain (Figure 35).



FIG. 35

3. After draining, open the recovery tank and clean out the tank (Figure 36).



FIG. 36

4. Clean the float shut-off screen and debris tray located in the recovery tank (Figure 37).



FIG. 37

DRAINING SOLUTION TANK

1. To drain remaining water from the solution tank, pull the solution tank level hose off the hose fitting (Figure 38).

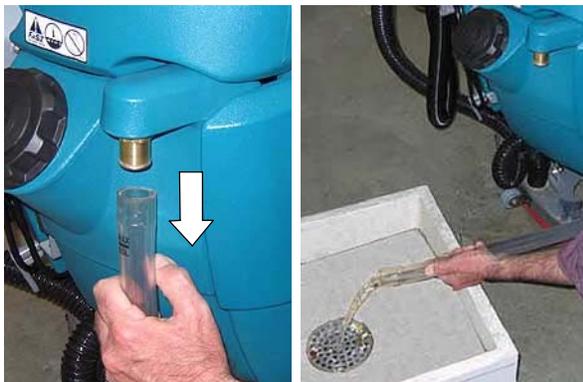


FIG. 38

2. To rinse out the solution tank remove the clean-out cap at the rear of the machine and spray water directly into the clean-out ports (Figure 39).



FIG. 39

3. Clean the solution tank filter (Figure 40).



FIG. 40

CHARGING BATTERIES

ATTENTION: To prolong the life of the batteries only recharge the batteries if the machine was used for a total of 30 minutes or more. Do not leave batteries discharged for lengthy periods.

⚠ WARNING: Fire Or Explosion Hazard. Batteries Emit Hydrogen Gas. Keep Sparks And Open Flame Away. Keep Battery Compartment Open When Charging.

FOR SAFETY: When servicing batteries, wear protective gloves and eye protection when handling batteries and battery cables. Avoid contact with battery acid.

BATTERY CHARGER SPECIFICATIONS:

- CHARGER TYPE:
 - FOR SEALED (Gel) BATTERIES
 - FOR WET (Lead acid) BATTERIES
- OUTPUT VOLTAGE - 24 VOLTS
- OUTPUT CURRENT - 20 AMPS
- AUTOMATIC SHUTOFF CIRCUIT
- FOR DEEP CYCLE BATTERY CHARGING

ON-BOARD BATTERY CHARGER SETTINGS:

If your machine is equipped with the on-board charger, the charger settings must be set for your battery type before charging. Failure to properly set will result in battery damage.

To determine your battery type, see battery label. Contact your battery supplier if not specified.

To verify the setting of the charger, connect the charger cord into an electrical receptacle. The charger will display a sequence of codes. One of the codes will either read "GEL" or "Acd" (Figure 41).

GEL = Set for sealed/maintenance free batteries
 Acd = Set for wet/lead acid batteries



FIG. 41

OPERATION

To change the setting, unplug the charger, peel up the corner of the display label and set the switches accordingly (Fig. 42). The charger cord must be unplugged when resetting.



FIG. 42

USING THE ON-BOARD BATTERY CHARGER

IMPORTANT: Before charging, make sure that the charger setting is properly set for your battery type (See ON-BOARD CHARGER SETTINGS).

1. Transport the machine to a well-ventilated area.
2. Park the machine on a flat, dry surface. Turn the key off and set the parking brake, if equipped.
3. If charging wet (lead acid) batteries check the fluid level before charging (See BATTERY MAINTENANCE).
4. Prop up the recovery tank for ventilation (Figure 43).



FIG. 43

5. Connect the charger's AC power supply cord into a properly grounded receptacle (Figure 44).

NOTE: The machine will not operate when charging.



FIG. 44

6. The charger will display a sequence of codes once the cord is connected (Figure 45).

Three-digits + the following code:

- A = Charging current
- U = Battery Voltage
- h = Charging time
- C = Charging ampere-hours [Ah]
- E = Energy used [Kwh]

"GEL" or "Acd" = Battery type the charger is currently set for. Before charging make sure your battery type matches the display: GEL=Sealed, Acd=WET (lead acid). To change setting, see ON-BOARD CHARGER SETTINGS.

Press the arrow button to review the codes.



FIG. 45

7. Once the charging cycle begins, the indicator lights will progress from red, yellow to green. When the green indicator light comes on, the charging cycle is done. Unplug the charger cord.

If the charger detects a problem, the charger will display an error code (See ON-BOARD BATTERY CHARGER ERROR CODES).

ON-BOARD BATTERY CHARGER ERROR CODES

| DISPLAY CODE | FAULT | SOLUTION |
|---------------------|--|--|
| bat | Loose or damaged battery cable | Check battery cable connections. |
| | Battery exceeded maximum voltage level. | No action necessary. |
| E01 | Exceeded maximum battery voltage allowed. | No action necessary. |
| E02 | Safety thermostat exceeded maximum internal temperature. | Check if the charger vents are obstructed. |
| E03 | Exceeded maximum time for charging phase leaving the batteries undercharged due to a sulfated or faulty battery. | Repeat the charging cycle and if the error code E03 reappears check battery or replace it. |
| SCt | Safety timer exceeded maximum charging time. Interrupts charging cycle. | Replace battery. |
| Srt | Possible internal short circuit. | Contact Service Center. |

OPERATION

ON-BOARD CHARGER FUSE REPLACEMENT

The on-board charger is protected by a 15 Amp fuse. To replace a blown fuse, follow the instructions as described below.

Required Fuse: 15 Amp (part no. 1030692).
Never substitute a higher Amp rated fuse than specified.

1. Unplug the charger's AC power supply cord before replacing the fuse.

⚠ WARNING: Electrical Hazard, Unplug Charger Plug Before Servicing Machine.

2. To access the on-board charger fuse, the machine's left side panel must be removed.

To remove the side panel:

- a. Lift the recovery tank to access the side panel mounting screws. Make sure the tank is empty.
- b. Remove the 3 mounting screws as shown (Figure 46).

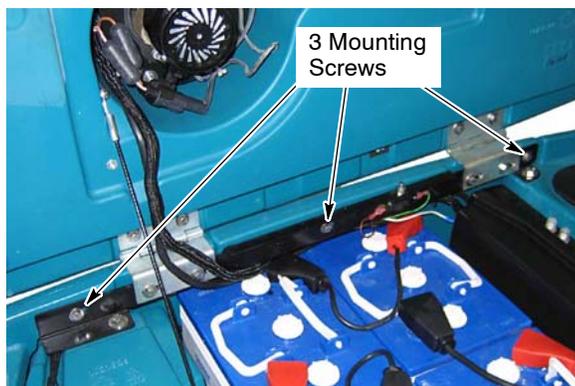


FIG. 46

- c. Lower the recovery tank and pry out the top left edge of the panel to remove (Figure 47).

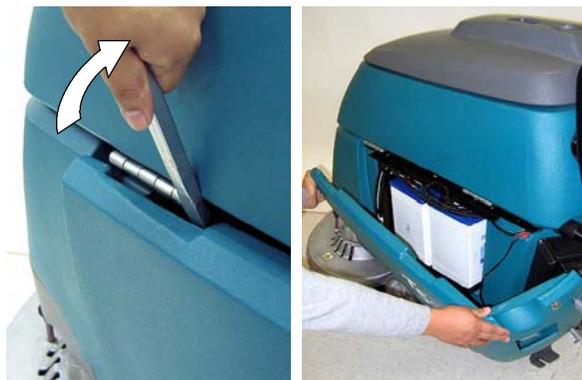


FIG. 47

3. The fuse holder is located at the bottom of the charger. Use a screwdriver to access the fuse (Figure 48).



FIG. 48

USING AN OFF-BOARD BATTERY CHARGER (OPTION)

1. Transport the machine to a well-ventilated area.
2. Park the machine on a flat, dry surface. Turn the key off and set the parking brake, if equipped.
3. If charging wet (lead acid) batteries, check the fluid level before charging (See BATTERY MAINTENANCE).
4. Prop up the recovery tank for ventilation (Figure 49).



FIG. 49

5. Connect the charger's AC power supply cord into a properly grounded receptacle.
6. Connect the charger's DC cord into the machine's battery receptacle (Figure 50).



FIG. 50

- The supplied charger will automatically begin charging and shut off when fully charged.

NOTE: The machine will not operate when charging.

ATTENTION: Do not disconnect the charger's DC cord from the machine's receptacle when the charger is operating. Arcing may result. If the charger must be interrupted during charging, disconnect the AC power supply cord first.

ADJUSTING SCRUB HEAD BRUSHES

To ensure optimum scrubbing performance periodically check the scrub head for proper adjustment.

FOR SAFETY: Before adjusting scrub head, stop machine on level surface, remove key and set parking brake if equipped.

DISK MODEL

Tools required: Measuring device, 1-1/16 in (27mm) wrench and 15/16 in (24mm) wrench

- With brushes installed, lower the scrub head and apply medium brush pressure.
- Turn machine off and remove key.
- From the center front and back of scrub head, measure the distance from the top edge of scrub head to the floor (Figure 51).



FIG. 51

- If scrub head is not level, loosen the lock nut and turn the scrub head leveling screw to level. Tighten down the lock nut once head is level (Figure 52).

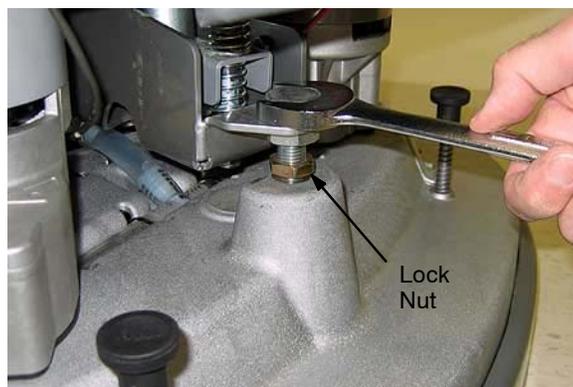


FIG. 52

CYLINDRICAL BRUSH MODEL

After installing a new set of cylindrical brushes check the brush pattern to ensure proper brush adjustment. Brushes that are not properly adjusted will result in premature wear and poor scrubbing performance (Figure 53).

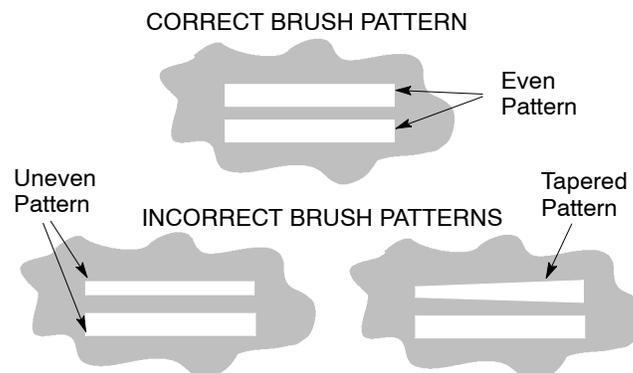


FIG. 53

To Inspect the Brush Pattern:

- Position the machine on a dry dusty floor or apply a powdered substance, such as chalk.
- Disconnect the drive motor wire connector to keep machine from moving forward (Figure 54).



FIG. 54

OPERATION

3. Lower the scrub head to the floor and apply maximum brush pressure.
4. Shut off the solution flow.
5. Pull the control handle bail to create a brush pattern on the floor.
6. Raise the scrub head and pull the machine away.
7. Observe the brush pattern on floor. If the brush pattern is uneven or tapered, adjustment is required.
8. Reconnect drive motor wire.

To Adjust an Uneven Brush Pattern:

Tools required: Measuring device, 1-1/16 in (27mm) wrench and 15/16 in (24mm) wrench

1. Measure the distance from the front edge of the scrub head to the floor and from the back edge of the scrub head to the floor (Figure 55). The measurements should be the same.



FIG. 55

2. To level the scrub head, loosen the lock nut and turn the leveling screw clockwise to lower the rear of the scrub head or counter-clockwise to lower the front (Figure 56).

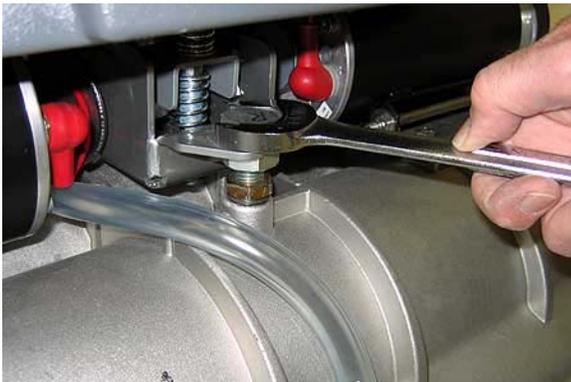


FIG. 56

3. Recheck brush pattern.

NOTE: Replace brushes when worn to 5/8" (15mm).

To Adjust a Tapered Brush Pattern:

Tools required: 3/8 in (10mm) wrench and 6mm hex wrench

1. Raise the scrub head off floor and remove key.
2. Remove the idler plate from the brush (Figure 57).



FIG. 57

3. Hold the brush plug shaft with a wrench and loosen the 6mm hex screw (Figure 58).

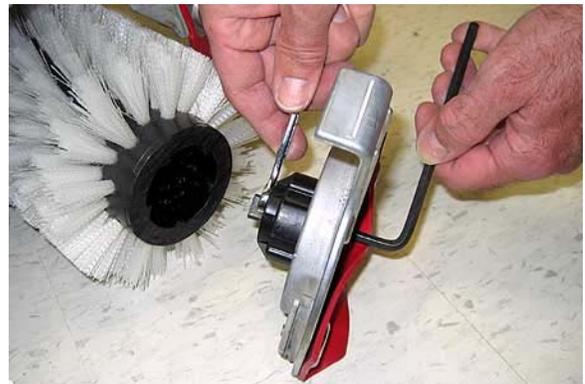


FIG. 58

4. To lower the brush end, turn the shaft clockwise for the front brush and counter-clockwise for the rear brush. Retighten hex screw (Figure 59).



FIG. 59

5. Recheck brush pattern.

NOTE: Replace brushes when worn to 5/8" (15mm).

MACHINE MAINTENANCE

To keep the machine in good working condition, it's important that the following maintenance procedures are performed on a routine basis.

⚠ WARNING: Electrical Hazard. Disconnect Battery Cables Before Servicing Machine.

DAILY MAINTENANCE (After Every Use)

1. Drain the recovery tank (Figure 60).



FIG. 60

2. Rinse and clean out the recovery tank (Figure 61).



FIG. 61

3. Remove the recovery tank float shut-off screen and clean (Figure 62).



FIG. 62

4. Remove the debris tray and empty (Figure 63)



FIG. 63

5. Drain the solution tank (Figure 64).

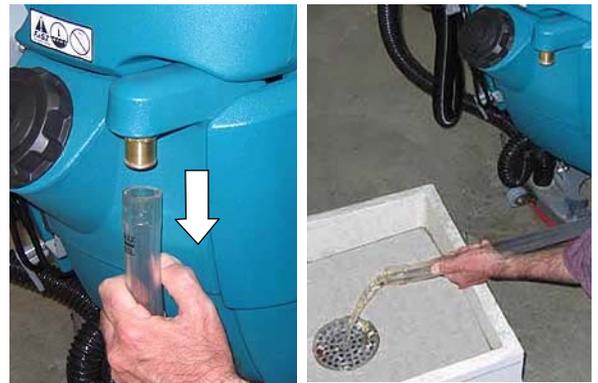



FIG. 64

6. Clean the solution tank filter (Figure 65).



FIG. 65

7. Rotate pad or replace when worn (Figure 66).

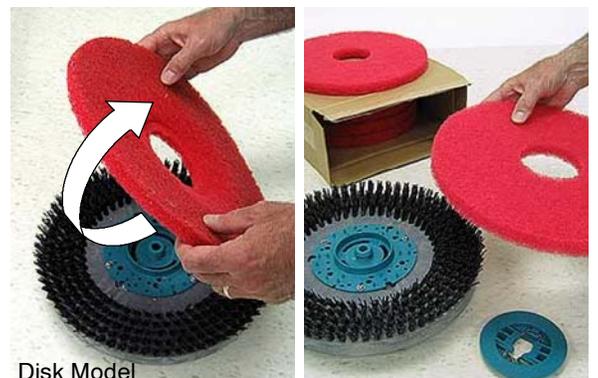

Disk Model

FIG. 66

OPERATION

8. Empty and rinse out the debris trough (Figure 67).

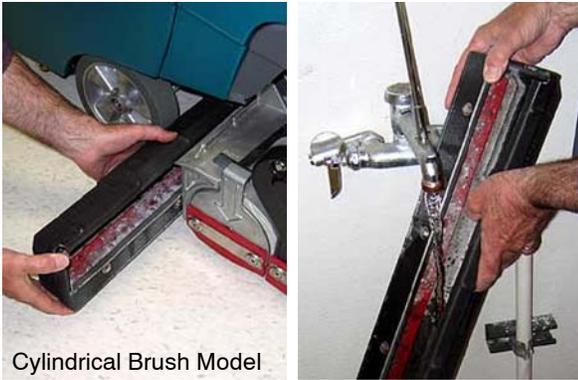


FIG. 67

9. Inspect the cylindrical brushes for wear. Rotate brushes from front-to-rear every 50 hours (Figure 68). Replace when worn to a length of 5/8" (15mm).

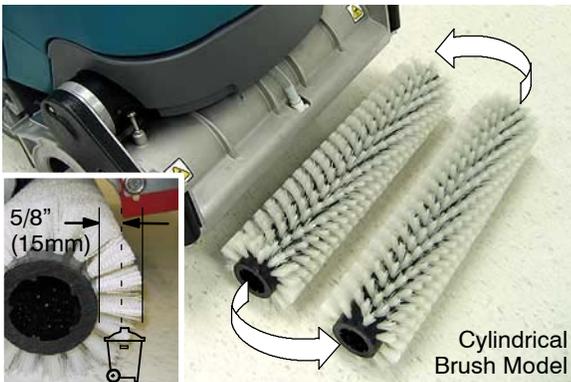


FIG. 68

10. Remove debris buildup from the underside of the cylindrical brush scrub head, including the idler plates and drive hubs (Figure 69).

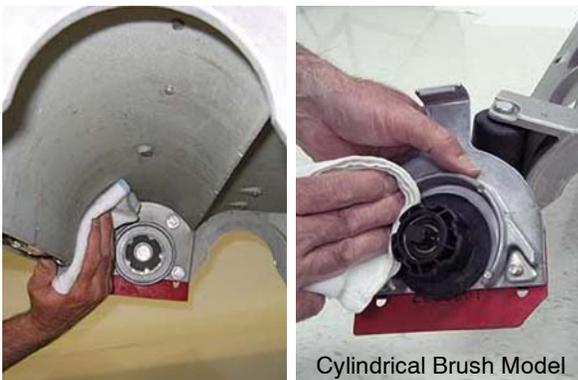


FIG. 69

11. Wipe the squeegee blades clean (Figure 70). Store the squeegee assembly in the raised position to prevent blade damage.



FIG. 70

12. Check the condition of the squeegee blade wiping edge (Figure 71). Rotate blade if worn (See SQUEEGEE BLADES).



FIG. 71

13. Clean the machine with an all purpose cleaner and damp cloth (Figure 72).

FOR SAFETY: When cleaning machine, do not power spray or hose off machine. Electrical malfunction may occur.



FIG. 72

14. Inspect the condition of the scrub head skirt, replace if worn or damaged (Figure 73).

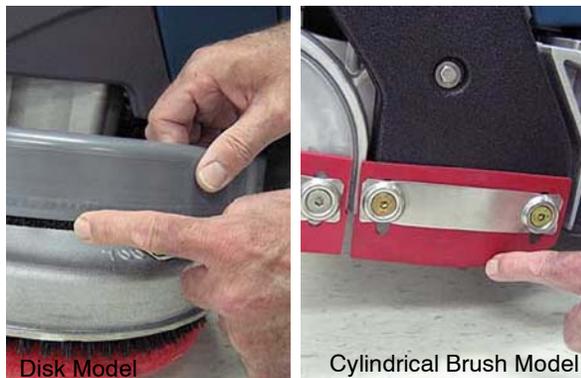


FIG. 73

15. FaST Model: Connect the FaST-PAK supply hose to the storage plug when not in use (Figure 74). Remove any dried concentrate from the hose connector by soaking it in warm water.



FIG. 74

16. Clean wet/lead acid batteries to prevent corrosion and check for loose battery cable connections (See BATTERY MAINTENANCE).
17. Recharge the batteries (Figure 75). To prolong the life of the batteries, only recharge the batteries if the machine was used for a total of 30 minutes or more.



FIG. 75

MONTHLY MAINTENANCE

1. Periodically check the belt tension on the two brush motors. Tighten the belt if you're able to twist it beyond 90° at midpoint (Figure 76).

⚠ WARNING: Electrical Hazard. Disconnect Battery Cables Before Servicing Machine.

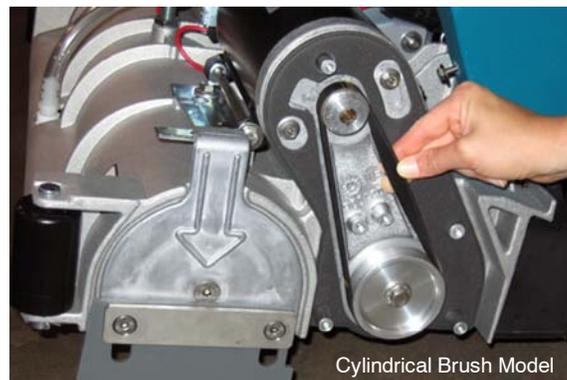


FIG. 76

2. Inspect and clean the recovery tank cover seal (Figure 77). Replace if damaged.



FIG. 77

3. Lubricate all pivot points and rollers with a water resistant grease.
4. Lubricate the casters with a water resistant grease (Figure 78).



FIG. 78

OPERATION

5. Clean the parking brake clamp with a cleaning solvent.
6. Check the machine for loose nuts and bolts.
7. Check the machine for leaks.

BATTERY MAINTENANCE (Wet/lead acid batteries)

1. Check battery fluid level frequently to prevent battery damage. The fluid should be at the level shown (Figure 79). Add distilled water if low. **DO NOT OVERFILL**, the fluid may expand and overflow when charging.



CORRECT BATTERY FLUID LEVEL:

Before Charging

After Charging

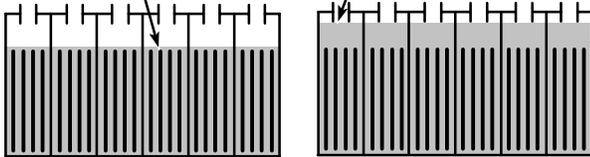


FIG. 79

⚠ WARNING: Fire Or Explosion Hazard. Batteries Emit Hydrogen Gas. Keep Sparks And Open Flame Away. Keep Battery Compartment Open When Charging.

2. Clean the batteries to prevent battery corrosion. Use a scrub brush with a mixture of baking soda and water (Figure 80).

FOR SAFETY: When cleaning batteries, wear protective gloves and eye protection. Avoid contact with battery acid.



FIG. 80

SQUEEGEE BLADES

When the blades become worn, simply rotate the blades end-for-end or top-to-bottom to a new wiping edge. Replace blades when all edges are worn.

The front blades on the 700mm/800mm squeegee assemblies have 12/14 slots on one edge and 6 slots on the opposite edge (Figure 81). If making sharp turns with the cylindrical brush models use the 12/14 slotted edge for maximum water pickup.

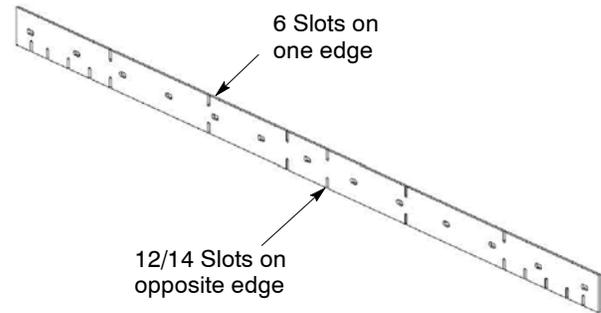


FIG. 81

Replacing Squeegee Blades:

1. Loosen the band clamp and remove the band from the squeegee assembly (Figure 82).

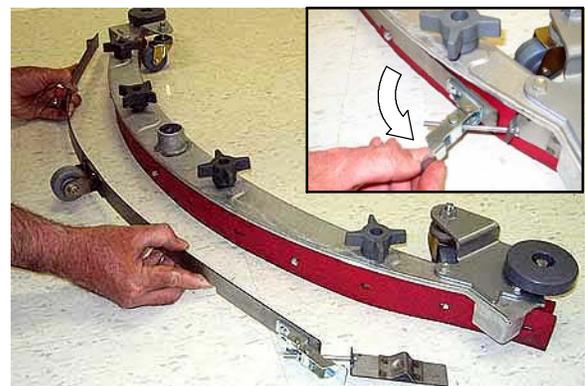


FIG. 82

- Replace or rotate the rear blade to a new wiping edge and replace band (Figure 83).

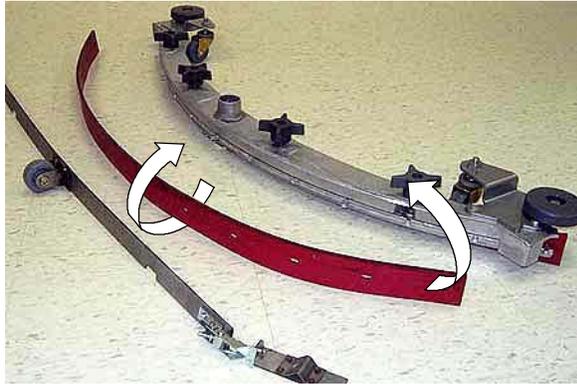


FIG. 83

- To change the front blade, remove the band and loosen the four knobs. Replace or rotate the front blade to a new wiping edge (Figure 84)

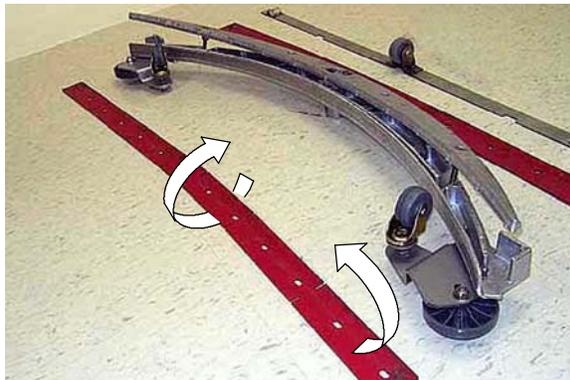


FIG. 84

MOTOR MAINTENANCE

Contact an Authorized Service Center for carbon brush replacement.

| Carbon Brush Replacement | Hours |
|--------------------------|-------|
| Drive Transaxle Motor | 750 |
| Vacuum Motor | |
| Disk Brush Motors | |
| Cylindrical Brush Motors | 1000 |

⚠ WARNING: Electrical Hazard. Disconnect Battery Cables Before Servicing Machine.

FaST SYSTEM MAINTENANCE

Every 1000 hours replace the water filter and air filter located in the FaST detergent injector. Order filter kit p/n 9003009.

- To access the detergent injector assembly, lower the scrub head and remove the front cover (Figure 85).

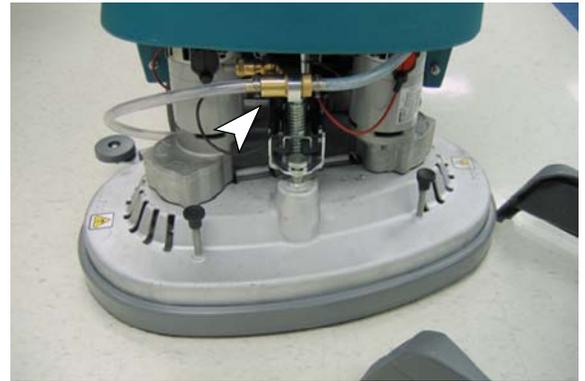


FIG. 85

- Remove the injector assembly from clamps (Figure 86).



FIG. 86

- Replace the water and air filter. An 8mm hex wrench is required to install the new water filter (Figure 87).



FIG. 87

OPERATION

ec-H2O MODULE FLUSH PROCEDURE

This procedure is only required when an alarm sounds and the ec-H2O system indicator light begins to blink red.

1. Drain the solution tank and recovery tank of all water.
2. Pour 1 gallon (4 liters) of white or rice vinegar into the solution tank at full strength. Do not dilute.

NOTE: Use *white or rice vinegar* only. The acidity level should be between 4-8%. Do not use other acids for this procedure.

FOR SAFETY: When servicing machine, wear protective gloves and eye protection when handling vinegar.

3. Disconnect the black connector fitting at the scrub head and place the hose into a bucket (Figure 88). To access the connector fitting, you may have to remove the front cover from the machine.



FIG. 88

4. Turn the key to the on (I) position.

5. Press and release the ec-H2O module flush switch to start the flush cycle (Figure 89). The module is located under the recovery tank.

NOTE: The module will automatically shut off when the flush cycle is complete (approx. 7 minutes). The module must run the full 7 minute cycle in order to reset the system indicator light and alarm.

Repeat flush procedure if the ec-H2O module does not reset. If module fails to reset, contact an Authorized Service Center.

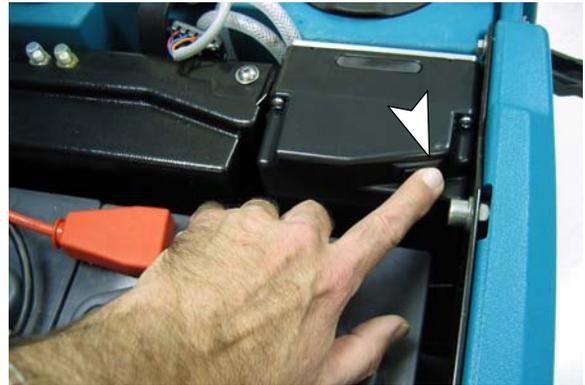


FIG. 89

JACKING UP MACHINE

Use the designated locations to jack up the machine for service (Figure 90). Empty the recovery and solution tank and position the machine on a level before jacking.

FOR SAFETY: When servicing machine, jack machine up at designated locations only. Use jack or hoist that will support machine weight.

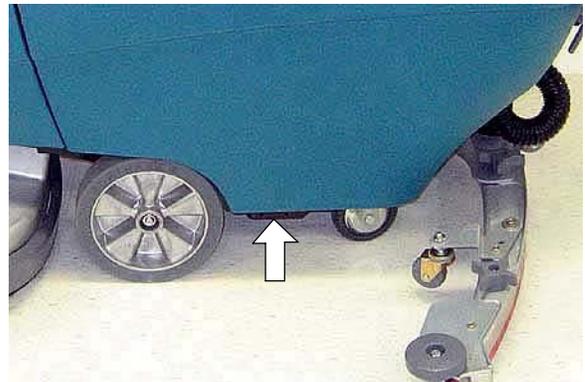


FIG. 90

TRANSPORTING MACHINE

When transporting the machine by trailer or truck, be certain to follow the transporting procedure below:

1. Drain machine tanks.
2. Load the machine using a ramp that can support the machine weight and person loading it. The maximum ramp incline should not exceed 11° at a ramp length of 12 ft (3.7m).
3. Position the front of machine up against the front of the trailer or truck. Lower the scrub head and squeegee.
4. Set the parking brake, if equipped, and place a block behind each wheel to prevent the machine from rolling.
5. Secure with tie-down straps as shown (Figure 91). It may be necessary to install tie-down brackets to trailer or truck.

FOR SAFETY: When loading/unloading machine onto/off truck or trailer, use a ramp that can support the machine weight and person loading it, do not exceed a 11° ramp incline at a ramp length of 12 ft (3.7m), use tie-down straps to secure machine and block machine wheels.

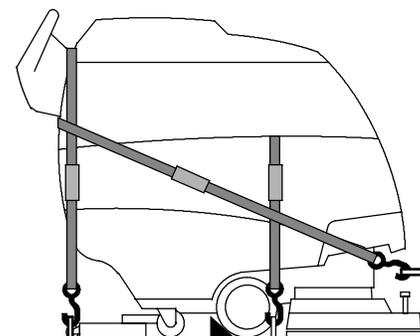


FIG. 91

STORING MACHINE

1. Charge the batteries before storing machine to prolong the life of the batteries.
2. Drain and rinse the tanks thoroughly.
3. Store the machine in a dry area with the squeegee and scrub head in the up position.
4. Open the recovery tank cover to promote air circulation.

ATTENTION: Do not expose machine to rain, store indoors.

5. If storing machine in freezing temperatures, follow the FREEZE PROTECTION instructions below.

FREEZE PROTECTION

1. Drain the solution tank and recovery tank of all water.
2. Pour 1 gallon (4 liters) of recreational vehicle (RV) antifreeze into the solution tank at full strength. Do not dilute.

FOR SAFETY: Avoid eye contact with antifreeze. Wear safety glasses.

3. Turn the machine power on and operate the solution flow system. Turn the machine off when the red RV antifreeze is visible.

If your machine is equipped with the off-aisle wand option, operate the off-aisle wand for a few seconds to protect the pump.

Continue with the freeze protection procedure if machine is equipped with the FaST or *ec-H2O* system.

***ec-H2O* Model:**

Press and release the flush switch on the *ec-H2O* module to cycle the antifreeze through *ec-H2O* system (Figure 92). When the antifreeze is visible, press the switch again to turn off the module.

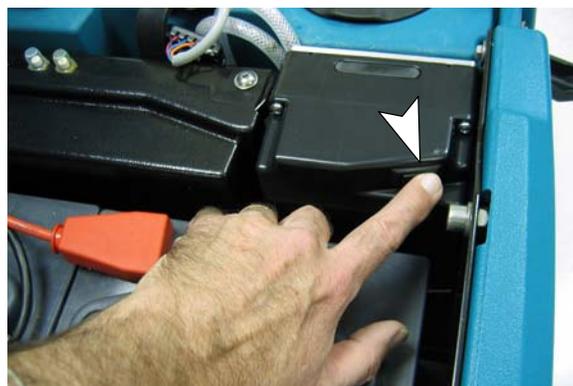


FIG. 92

IMPORTANT: Before operating machine, the antifreeze must be flushed from the module as described below.

If the antifreeze is not properly flushed from the *ec-H2O* system, the *ec-H2O* module may detect an error and not function (*ec-H2O* switch indicator light will turn red). If this occurs, reset key and repeat the flush procedure as described below.

Flushing antifreeze from *ec-H2O* module:

1. Drain the antifreeze from the solution tank into a bucket.
2. Fill the solution tank with cool water until full (See FILLING SOLUTION TANK).

OPERATION

3. Disconnect the black connector fitting at the scrub head and place the hose into a bucket (Figure 93). To access the connector fitting, you may have to remove the front cover from the machine.



FIG. 93

4. Press and release the *ec-H2O* module switch to flush the antifreeze from the *ec-H2O* system (Figure 92). The module is located under the recovery tank.

When the water turns clear, press the module switch again to stop the flush cycle.

Dispose the antifreeze in an environmentally safe way according to local waste disposal regulations.

5. The machine is now ready for scrubbing.

FaST Model:

The following items are required: valve coupling #1002856 and 6 in (15 cm) hose #63182.

1. Remove the FaST-PAK carton and connect the valve coupling and 6 in (15 cm) hose to the FaST detergent supply hose (Figure 94).

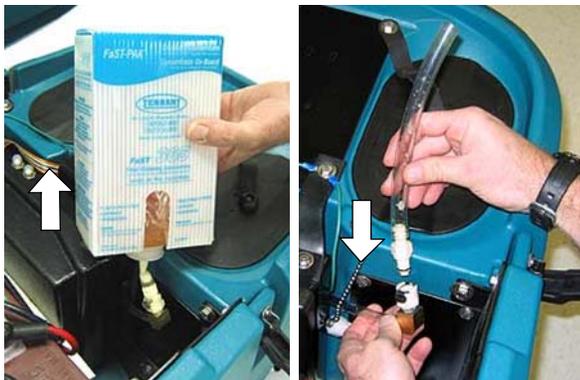


FIG. 94

2. Disconnect the opposite end of the FaST supply hose from the injector assembly and drain the detergent from the hose (Figure 95). Reconnect the hose after draining. To access the injector assembly remove the front cover.



FIG. 95

3. Pour the recreational vehicle (RV) antifreeze into the supply hose until full (Figure 96).
4. Keep the hose upright to prevent the antifreeze from spilling and lower the recovery tank.



FIG. 96

5. Operate the FaST system until the foaming stops. This step could take anywhere from 5 to 10 minutes.
6. When finished, connect the supply hose to the storage plug (Figure 97).



FIG. 97

10. To drain the antifreeze from the FaST supply hose, repeat steps 1 and 2.

RECOMMENDED STOCK ITEMS

Refer to the Parts List Manual for recommended stock items. Stock Items are clearly identified with a bullet preceding the parts description. See example below:

| | | | |
|----|---------|------------|--|
| 26 | 1017380 | (00000000- |) • Hose, Drain, Assy, 1.5d X 29.5l, Blk,Flx |
| 27 | 1008639 | (00000000- |) • Drain Assy |
| 28 | 1019563 | (00000000- |) • Strap, Drain Cap |
| 29 | 1008637 | (00000000- |) • O Ring, 1.48" Id, 1.76" Od |

TROUBLESHOOTING

| PROBLEM | CAUSE | SOLUTION |
|--|------------------------------------|--|
| Machine will not operate | Discharged batteries | Charge batteries |
| | Emergency-stop button activated | Turn button clockwise to reset |
| | Faulty battery(s) | Replace battery(s) |
| | Loose battery cable | Tighten loose cable |
| | Faulty control board | Contact Service Center |
| | Faulty key switch | Contact Service Center |
| | Machine fault detected. | See Contol Panel Fault Indicator Codes |
| Onboard battery charger will not operate | Plug not connected to power supply | Check plug connection |
| | Faulty charger fuse | Replace charger fuse |
| | Faulty power supply cord | Replace cord |
| | Error detected. | See On-board Battery Charger Error Codes |
| Brush motor(s) will not operate | 1-STEP scrub button is off | Turn on the 1-STEP scrub button |
| | Brush motor overload | See Control Panel Fault Indicator Codes |
| | Discharged batteries | Charge batteries |
| | Faulty control board | Contact Service Center |
| | Faulty scrub head (up/down) switch | Contact Service Center |
| | Faulty control handle bail switch | Contact Service Center |
| | Faulty brush motor or wiring | Contact Service Center |
| | Worn carbon brushes | Contact Service Center |
| Broken or loose belt (cylindrical brush model) | Replace or tighten belt | |
| Machine will not propel | Parking brake is set | Release parking brake lever |
| | Machine fault detected | See Control Panel Fault Indicator Codes |
| | Faulty control board | Contact Service Center |
| | Wheels raised off floor | Contact Service Center |
| | Faulty transaxle motor or wiring | Contact Service Center |
| | Worn carbon brushes | Contact Service Center |
| | Exceeded maximum incline | Avoid steep inclines and reset key |
| Vacuum motor will not operate | Squeegee is raised off floor | Lower squeegee |

OPERATION

TROUBLESHOOTING - Continued

| PROBLEM | CAUSE | SOLUTION |
|--|--|-----------------------------------|
| Vacuum motor will not operate | Discharged batteries | Charge batteries |
| | Faulty control board | Contact Service Center |
| | Faulty vacuum motor or wiring | Contact Service Center |
| | Worn carbon brushes | Contact Service Center |
| Little or no solution flow | Solution tank is empty | Fill solution tank |
| | Clogged solution tank filter | Clean solution tank filter |
| | Discharged batteries | Charge batteries |
| | Clogged solution valve | Remove valve and clean |
| | Faulty control board | Contact Service Center |
| Poor water pickup | Recovery tank is full or excessive foam buildup | Drain recovery tank |
| | Loose drain hose cap | Tighten cap |
| | Clogged float shut-off screen located in recovery tank | Clean screen |
| | Clogged squeegee assembly | Clean squeegee assembly |
| | Worn squeegee blades | Replace or rotate squeegee blades |
| | Incorrect Squeegee blade deflection | Adjust Squeegee blade height |
| | Loose vacuum hose connections | Secure hose connections |
| | Clogged vacuum hose | Remove clogged debris |
| | Damaged vacuum hose | Replace vacuum hose |
| | Recovery tank cover not in place | Properly position cover |
| | Damaged recovery tank cover seal | Replace seal |
| | Faulty vacuum motor | Contact Service Center |
| Poor scrubbing performance | Debris caught in brush | Remove debris |
| | Worn brushes/pads | Replace brushes/pads |
| | Incorrect brush pressure setting | Adjust pressure setting |
| | Wrong brush/pad type. | Use correct brush/pad |
| Reduced run time | Batteries not fully charged | Fully recharge batteries |
| | Defective batteries | Replace battery |
| | Batteries need maintenance | See BATTERY MAINTENANCE |
| | Faulty battery charger | Repair or replace battery charger |
| Solution flow and brush pressure buttons and FaST system switch are locked | Supervisor controls are activated (lock-out feature) | Contact your Supervisor |


TROUBLESHOOTING - Continued

| PROBLEM | CAUSE | SOLUTION |
|--|--|---|
| FaST Model: FaST System does not operate or operate correctly | FaST system switch is not turned on | Turn on FaST system switch |
| | FaST-PAK supply hose not connected | Connect supply hose |
| | Clogged FaST-PAK supply hose or connectors | Soak in warm water to unclog |
| | Empty FaST-PAK carton | Replace FaST-PAK carton |
| | Kink in FaST-PAK supply hose | Undo hose kink |
| | Clogged FaST solution system | Contact Service Center |
| | Faulty FaST system on/off switch | Contact Service Center |
| | Faulty pump | Contact Service Center |
| | Clogged solution tank filter | Drain solution tank. Remove solution tank filter, clean and reinstall |
| | Clogged detergent orifice/filter screen | Replace orifice/filter screen (See FaST SYSTEM MAINTENANCE) |
| | Clogged FaST solution inlet filter | Contact Service Center |
| | Faulty control board | Contact Service Center |
| ec-H2O Model: ec-H2O system indicator light blinking red | Mineral deposit build-up in module | Flush module (See <i>ec-H2O</i> MODULE FLUSH PROCEDURE) |
| ec-H2O Model: Alarm Sounds | | |
| ec-H2O Model: ec-H2O system indicator light solid red | Defective module | Contact Service Center |
| ec-H2O Model: ec-H2O system indicator light does not turn on | Defective light or module | Contact Service Center |
| ec-H2O Model: No water flow | Clogged module | Contact Service Center |
| | Defective solution pump | Replace solution pump |

OPERATION

CONTROL PANEL FAULT INDICATOR CODES

The control panel fault indicator lights will display the following codes when the machine detects a fault.

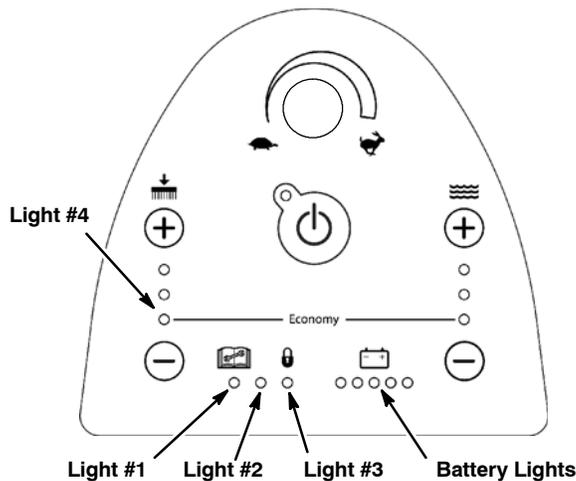

| CODE | FAULT | SOLUTION |
|--|--|---|
| Light #1 blinks | Recovery tank is raised. | Lower recovery tank. Restart key to reset. |
| Lights #1, #2 and #3 ripple | Battery charger connected. | Disconnect battery charger. Restart key to reset. |
| Lights #1 and #4 blink | Left Brush motor overload. | Inspect brush for entangled debris, improper pad or contact service center. Restart key to reset. |
| Lights #3 and #4 blink | Right Brush motor overload. | Inspect brush for entangled debris, improper pad or contact service center. Restart key to reset. |
| Lights #2 and #3 blink | Propel motor overload. Exceeded maximum incline. | Avoid steep inclines or contact service center. Restart key to reset. |
| Lights #1 and #3 blink | Scrub head movement is obstructed or actuator motor malfunction. | Check scrub head for obstruction or contact service center. Restart key to reset. |
| Light #2 blinks | Vacuum motor malfunction. | Contact service center. |
| Lights #1 and #2 blink | Propel throttle malfunction. | Contact service center. |
| Light #3 blinks | FaST pump overload or malfunction. | Reset the 10A circuit breaker or contact service center. Restart key to reset. |
| Light #3 blinks when pressing the solution flow, brush pressure buttons and FaST system switch | Supervisor controls activated (lockout feature) | Contact your Supervisor. |
| Lights #1, #2 and #3 blink | Wand Pump overload or malfunction. | Reset the 10A circuit breaker button or contact service center. Restart key to reset. |
| All battery lights blink | Emergency-Stop button activated | Turn button clockwise to reset. |
| All battery lights ripple | Key turned on while bail was engaged. | Release the control handle start bail. |

MACHINE SPECIFICATIONS

| MODEL | Disk, 600 mm | Disk, 700 mm | Disk, 800 mm | Cylindrical, 650 mm | Cylindrical, 800 mm |
|--|--|--|--|--|--|
| LENGTH | 53 in / 1,346 mm | 55.1 in / 1,400 mm | 57.6 in / 1,463 mm | 54.6 in / 1,387 mm | 54.6 in / 1,387 mm |
| WIDTH | 25.4 in / 645 mm | 29 in / 737 mm | 33 in / 838 mm | 28 in / 711 mm | 34 in / 864 mm |
| HEIGHT | 44 in / 1,120 mm | | | | |
| MINIMUM AISLE TURN | 53 in / 1,346 mm | 59 in / 1,499 mm | 64 in / 1,626 mm | 62 in / 1,575 mm | 64.5 in / 1,638 mm |
| WEIGHT | 316 lb / 143 kg | 365 lb / 166 kg | 377 lb / 171 kg | 357 lb / 162 kg | 365 lb / 166 kg |
| WEIGHT WITH BATTERIES | 580 lb / 263 kg | 609 lb / 276 kg | 621 lb / 282 kg | 621 lb / 282 kg | 629 lb / 285 kg |
| RECOVERY TANK CAPACITY | 27 gal / 102 L | | | | |
| SOLUTION TANK CAPACITY | 22.5 gal / 85 L | | | | |
| DRIVE SYSTEM | Transaxle, 24 V, .25 hp / .19 kW | | | | |
| TRAVEL SPEED, MAXIMUM | Cleaning: 220 ft / 67 m/min Transporting: 235 ft / 72 m/min | | | | |
| PRODUCTIVITY RATE Theoretical | 26,400 ft ² / 2,450 m ² h | 30,800 ft ² / 2,860 m ² h | 35,200 ft ² / 3,270 m ² h | 28,600 ft ² / 2,660 m ² h | 35,200 ft ² / 3,270 m ² h |
| PRODUCTIVITY RATE Estimated Actual | 17,875 ft ² / 1,660 m ² h | 20,800 ft ² / 1,930 m ² h | 24,000 ft ² / 2,230 m ² h | 19,200 ft ² / 1,785 m ² h | 24,000 ft ² / 2,230 m ² h |
| CLEANING PATH WIDTH | 24 in / 600 mm | 28 in / 700 mm | 32 in / 800 mm | 26 in / 650 mm | 32 in / 800 mm |
| BRUSH DIAMETER | 11.9 in / 302 mm | 13.9 in / 353 mm | 15.9 in / 404 mm | 5.9 in / 151 mm | 5.9 in / 151 mm |
| BRUSH PRESSURE | 40 lb / 18 kg, 80 lb / 36 kg, 120 lb / 54 kg | | | | |
| SOLUTION FLOW RATE - Max: | .45 gpm / 1.70 L/min | .50 gpm / 1.90 L/min | .45 gpm / 1.70 L/min | .45 gpm / 1.70 L/min | .50 gpm / 1.90 L/min |
| SOLUTION FLOW RATE - Med: | .35 gpm / 1.30 L/min | .40 gpm / 1.51 L/min | .35 gpm / 1.30 L/min | .35 gpm / 1.30 L/min | .40 gpm / 1.51 L/min |
| SOLUTION FLOW RATE - Low: | .25 gpm / .95 L/min | .30 gpm / 1.14 L/min | .25 gpm / .95 L/min | .25 gpm / .95 L/min | .30 gpm / 1.14 L/min |
| SQUEEGEE WIDTH | 35.7 in / 908 mm standard | 41.3 in / 1,051 mm standard | 46.6 in / 1,185 mm standard | 41.3 in / 1,051 mm standard | 46.6 in / 1,185 mm standard |
| | 31.5 in / 800 mm narrow aisle | 35.7 in / 908 mm narrow aisle | 41.3 in / 1,051 mm narrow aisle | 35.7 in / 908 mm narrow aisle | 41.3 in / 1,051 mm narrow aisle |
| BRUSH MOTOR | Qty 2, .75 hp / .55 kW, 220 rpm, 24 V, 29 A | | | Qty 2, .63 hp / .47 kW, 1,500 rpm, 24 V, 23 A | |
| VACUUM MOTOR | .85 hp / 640 W, 3-stage 5.7, 24 V, 26 A | | | | |
| WATER LIFT/AIR FLOW | 62 in / 55 mm - H ₂ O 69 ft ³ / 32.4 L ³ /min | | | | |
| BATTERIES | Qty 4, 6 V | | | | |
| BATTERY CAPACITY | WET (lead Acid) = 235 Ah @ 20 h rate Sealed (Gel) = 200 Ah @ 20 h rate | | | | |
| RUN TIME PER CHARGE* | WET = 5.5 h / Gel = 4.5 h | | | | |
| ONBOARD CHARGER | 120VAC, 10 A, 50/60 Hz, 24VDC, 20 A output / 230VAC, 5 A, 50/60 Hz, 24VDC, 20 A output | | | | |
| TOTAL POWER CONSUMPTION | 50 Amp nominal | | | | |
| VOLTAGE DC | 24 VDC | | | | |
| PROTECTION GRADE | IPX3 | | | | |
| DECIBEL RATING AT OPERATOR'S EAR, INDOORS.** | 67dB(A) | | | 68dB(A) | |
| VIBRATION AT CONTROLS | <.39 ft/s ² / <.1188 m/s ² | | | <.34 ft/s ² / <.103 m/s ² | |
| ACCELERATION RATE ON OPERATOR - MAX. | .56 ft/s ² / .179 m/s ² | | | | |
| GRADE LEVEL, MAX. | Scrubbing 5% (3°), Transporting 8% (5°) | | | | |

* Run times are based on Continuous Scrubbing Run Times.


** Sound pressure (ISO 11201) as recommended by the American Association of Cleaning Equipment Manufacturers (AACEM) and OSHA.

OPERATION

| FaST SYSTEM | Disk, 600 mm | Disk, 700 mm | Disk, 800 mm | Cylindrical, 650 mm | Cylindrical, 800 mm |
|--|---|--|--|--|--|
| PRODUCTIVITY RATE Estimated Actual | 20,075 ft ² / 1,865 m ² h | 22,750 ft ² / 2,115 m ² h | 26,250 ft ² / 2,440 m ² h | 21,000 ft ² / 1,950 m ² h | 26,250 ft ² / 2,440 m ² h |
| SOLUTION PUMP | 24 Volt DC, 3.5 A, 1.5 gpm / 5.6L/min open flow, 60 psi / 4.13 bar bypass setting | | | | |
| SOLUTION FLOW RATE | 0.15 gpm / 0.57 L/min | 0.22 gpm / 0.83 L/min | | 0.15 gpm / 0.57 L/min | 0.22 gpm / 0.83 L/min |
| CONCENTRATE FLOW RATE | 0.0193 oz / 0.57 cc/min | 0.028 oz / 0.83 cc/min | | 0.0193 oz / 0.57 cc/min | 0.028 oz / 0.83 cc/min |
| CONCENTRATE TO WATER DILUTION RATIO | 1:1000 | | | | |
| ec-H₂O SYSTEM | | | | | |
| FaST SYSTEM | Disk, 600 mm | Disk, 700 mm | Disk, 800 mm | Cylindrical, 650 mm | Cylindrical, 800 mm |
| PRODUCTIVITY RATE Estimated Actual | 20,075 ft ² / 1,865 m ² h | 22,750 ft ² / 2,115 m ² h | 26,250 ft ² / 2,440 m ² h | 21,000 ft ² / 1,950 m ² h | 26,250 ft ² / 2,440 m ² h |
| SOLUTION PUMP | 24 Volt DC, 3.5 A, 1.5 gpm / 5.6L/min open flow, 60 psi / 4.13 bar bypass setting | | | | |
| SOLUTION FLOW RATE * | 0.15 gpm / 0.57 L/min (standard) | 0.22 gpm / 0.83 L/min (standard) | | 0.22 gpm / 0.83 L/min (standard) | 0.33 gpm / 1.25 L/min (standard) |
| | 0.22 gpm / 0.83 L/min (optional) | 0.33 gpm / 1.25 L/min (optional) | | 0.30 gpm / 1.14 L/min (optional) | 0.44 gpm / 1.67 L/min (optional) |
| | 0.30 gpm / 1.14 L/min (optional) | 0.44 gpm / 1.67 L/min (optional) | | | |

* If the optional solution flow rates are required, contact an Authorized Service Center.

MACHINE DIMENSIONS

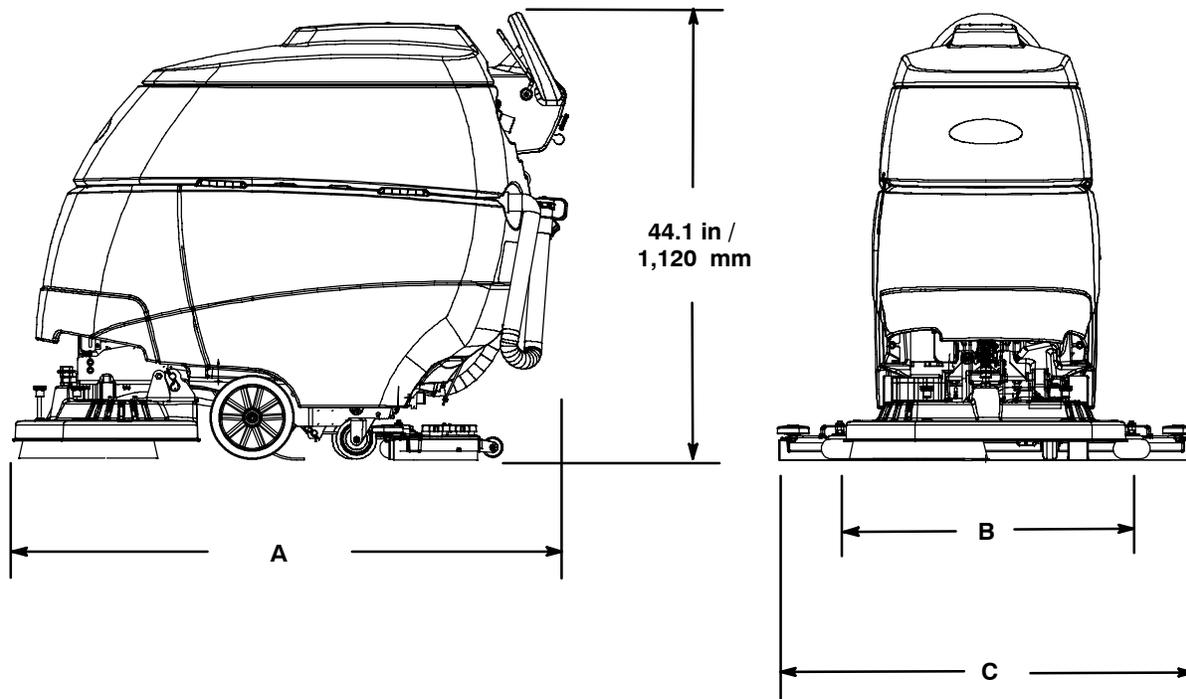

| Models: | 600 mm Disk | 700 mm Disk | 800 mm Disk | 650 mm Cylindrical | 800 mm Cylindrical |
|---------|------------------|--------------------|--------------------|-----------------------|-----------------------|
| A = | 53 in / 1,346 mm | 55.1 in / 1,400 mm | 57.6 in / 1,463 mm | 54.6 in / 1,387 mm | 54.6 in / 1,387 mm |
| B = | 25.4 in / 645 mm | 29 in / 737 mm | 33 in / 838 mm | 28 in / 711 mm | 34 in / 864 mm |
| C = | 35.7 in / 908 mm | 41.3 in / 1,051 mm | 46.6 in / 1,185 mm | 41.3 in / 1,051 mm | 46.6 in / 1,185 mm |